



¥ 🖻 🛢 3:18

Q

📞 🖪 😁 🖳 🌰

User Guide

Disclaimer

© 2018 Fujian Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty provided by Fujian Newland Auto-ID Tech. Co., Ltd.

All pictures in this manual are for reference only and actual product may differ. Regarding to the product modification and update, Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Fujian Newland Auto-ID Tech. Co., Ltd or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from Newland.

Risk Warning Regarding Unauthorized System Updates:

You should use the Newland-provided tool to update this product's system. Modifying system files through installing a third-party ROM system or using any cracking method may result in product malfunction or data loss and this will void your warranty.

Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Fujian Newland Auto-ID Tech. Co., Ltd. 3F, Building A, No.1, Rujiang West Rd., Mawei, Fuzhou, Fujian, China 350015 http://www.newlandaidc.com

Revision History

Description	Date
Initial release.	January 16, 2018
 Initial release. Added the "USB Charging Cradle", "Ethernet Charging Cradle", "Installing a Pistol Grip on the MT90" and "Installing a Rubber Boot on the MT90" sections, and modified the "Accessories (Optional)", "Charging the Battery" and "Communicating with PC" sections in Chapter 2. Added the "Floating Button Settings", "Clearing the App Cache" and "Power Saving Settings" features, and modified the "Status Icons" section in Chapter 3. Added the "Data Edit", "Central Area Decoding", "Noise Reduction", "Exposure Level" and "Power Plan" features, and deleted the "Data Extraction" and "Character Replacement" features in Chapter 4. Modified Chapter 5 – 11. Note: You must have firmware version V1.01.005 or later to use the new 	January 16, 2018 June 11, 2018
	 Initial release. 1. Added the "USB Charging Cradle", "Ethernet Charging Cradle", "Installing a Pistol Grip on the MT90" and "Installing a Rubber Boot on the MT90" sections, and modified the "Accessories (Optional)", "Charging the Battery" and "Communicating with PC" sections in Chapter 2. 2. Added the "Floating Button Settings", "Clearing the App Cache" and "Power Saving Settings" features, and modified the "Status Icons" section in Chapter 3. 3. Added the "Data Edit", "Central Area Decoding", "Noise Reduction", "Exposure Level" and "Power Plan" features, and deleted the "Data Extraction" and "Character Replacement" features in Chapter 4. 4. Modified Chapter 5 – 11.

Table of Contents

Revision History	3 -
Chapter 1 About This Guide	1
Introduction	1
Documentation Set	1
Chapter Descriptions	1
More Information	2
Chapter 2 Getting Started	3
Introduction	3
Unpacking	3
Accessories (Optional)	3
Getting Started	4
Тhe МТ90	4
Keypad	6
LEDs on the MT90	7
USB Charging Cradle	8
Ethernet Charging Cradle	8
Installing the Battery	9
Removing the Battery	9
Charging the Battery	10
Communicating with PC	11
Installing the Micro SD Card/SIM Card	12
Installing a Pistol Grip on the MT90	12
Installing a Rubber Boot on the MT90	12
Chapter 3 Basics	13
Introduction	13
Switching On/ Rebooting/ Switching Off the MT90	13
Locking/Unlocking the MT90	14
Home Screen	14
Status Icons	15
Installing App	16
Uninstalling App	16
Date & Time	17

Display	
Ringtones	
Restoring Factory Settings	
Language & Input Method	
Floating Button Settings	
Clearing the App Cache	
Power Saving Settings	
Shortcuts to Apps	
Widgets	
Chapter 4 Scanning Barcodes	23
Introduction	23
Scanning 1D Barcode	23
Scanning 2D Barcode	24
Programming Scanner	25
Enable Scan	25
Output Mode	26
Scan Mode	27
Scan Trigger	
Prefix & Suffix	
Good Read Indicator	
Encoding	29
Data Edit	
Symbologies	
Chapter 5 Bluetooth	
Chapter 6 Wi-Fi	
Introduction	
Wi-Fi Settings	
IP Settings	
Chapter 7 Mobile Network	
Introduction	
Mobile Network Settings	
APN Settings	
Chapter 8 Admin Tool	

Introduction	
Launching the Admin Tool	
Switching between User Mode and Admin Mode	
Chapter 9 Whitelist Manager	
Introduction	
Logging in to Whitelist Manager	
Setting the Whitelist	40
Chapter 10 Others	
Camera	42
GPS	
NFC (optional)	
Memory Cleanup	
Кеу Мар	46
Chapter 11 System Update	47
Chapter 12 App Development Guide	
Development Environment	
Use of Non-standard Interfaces	
Chapter 13 Maintenance & Troubleshooting	
Introduction	
Important Safety & Handling Information	
Disassembly and Retrofit	
External Power Supply	
Abnormal Situation	
Drop Damage	
LCD Screen	
Stacking Heavy Objects	
Mounting Location	
Wireless Functionalities	
Use & Maintenance	
Battery Safety Guidelines	
Troubleshooting	51

Chapter 1 About This Guide

Introduction

This guide provides instructions for programming and operating the NLS-MT90 portable data collector (hereinafter referred to as "**the MT90**" or "**the terminal**").

Documentation Set

The documentation set for the MT90 includes:

- ♦ NLS-MT90 Portable Data Collector Quick Start: Describes how to get the NLS-MT90 up and running.
- ♦ NLS-MT90 Portable Data Collector User Guide: Describes how to program and use the NLS-MT90.

Chapter Descriptions

♦ Chapter 1 About This Guide	Provides general description of this manual.
♦ Chapter 2 Getting Started	Provides information on getting the MT90 up and running for the first
	time.
♦ Chapter 3 Basics	Describes how to program the MT90 for the use of its basic features.
♦ Chapter 4 Scanning Barcodes	Provides the instructions as to how to scan 1D/2D barcodes and how
	to program the scanner.
♦ Chapter 5 Bluetooth	Explains how to use Bluetooth functionality.
♦ Chapter 6 Wi-Fi	Explains how to use Wi-Fi functionality.
♦ Chapter 7 Mobile Network	Explains how to use Mobile Network functionality.
♦ Chapter 8 Admin Tool	Explains how to use the admin tool.
♦ Chapter 9 Whitelist Manager	Explains how to use the whitelist management tool.
♦ Chapter 10 Others	Explains how to use Camera, GPS and NFC functionalities.
♦ Chapter 11 System Update	Explains how to update the system.
♦ Chapter 12 App Development Guide	Describes the app development environment and the use of non-
	standard interfaces.
♦ Chapter 13 Maintenance & Troubleshooting	Provides troubleshooting solutions for issues that might occur when
	using the MT90.

More Information

For more product and support information, please visit our web site: <u>http://www.newlandaidc.com</u>.

Chapter 2 Getting Started

Introduction

This chapter lists the parts and accessories for the MT90 and explains how to install, remove and charge the battery, and power on the MT90 for the first time.

Unpacking

Carefully remove all protective material from the pack and verify that the following items are present:


- ♦ 1 x NLS-MT90 main unit
- ♦ 1 x USB cable
- ♦ 1 x AC adapter for the MT90
- ♦ 1 x Li-Polymer battery
- ♦ 1 x Hand strap
- 1 x Quick Start manual

Accessories (Optional)


- ♦ Rubber boot
- ♦ Ethernet charging cradle
- ♦ USB charging cradle
- ♦ Pistol grip

Getting Started

The MT90

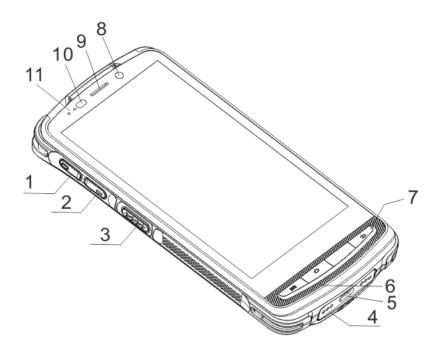


1	Volume+	2	Volume-
3	Left Scan Key	4	Cradle Connector
5	Micro USB Port	6	Microphone
7	Keypad	8	Front Camera (optional)
9	Earpiece	10	Light/Proximity Sensors
11	Red/Blue LEDs		

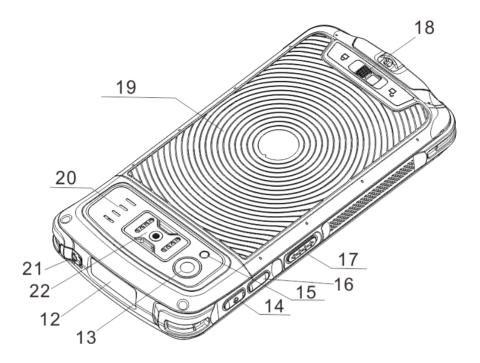

12	Scan Window	13	Flashlight
14	Power Key	15	Rear Camera
16	User-defined Key	17	Right Scan Key
18	Battery Cover Latch	19	NFC Detection Area
20	Speaker	21	Headphone Jack Cover
22	Expansion Port		

Keypad

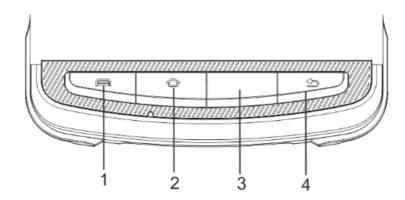

1	Menu Key	2	Home Key
3	Scan Key	4	Return Key

The MT90 has 10 keys, with Menu/Home/Scan/Return keys on the front panel, Volume+/Volume-/Scan keys on the left side and Power/User-defined/Scan key on the right side.

Menu Key: Press it to display the menu related to an on-screen item.

Home Key: Press it to go to the first Main Screen.


Press and hold the key to display the app(s) most recently used. Tap an app to open it.

Function Key: Use it to scan barcodes.

Return Key: Press it to go back to the previous screen.


Except the Power key, other keys are user programmable.

LEDs on the MT90

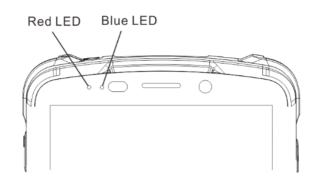


Scan/Decode		
Blue LED flashes once	Good read	
Charging/Battery Statuses		
Blue LED on	Fully charged	
Red LED on	Charging in progress	
Red LED flashes constantly	Low-battery alert	

USB Charging Cradle

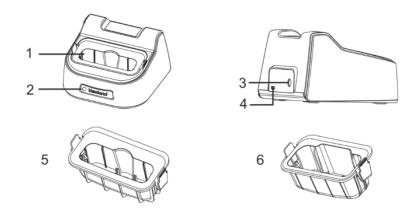


1	Charging Slot	2	Power LED
3	Power Jack	4	USB Port
5	Terminal Holder for MT90 main unit only	6	Terminal Holder for MT90 with rubber boot or pistol grip

Ethernet Charging Cradle

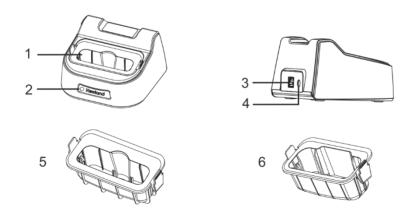

1	Charging Slot	2	Power LED
3	Ethernet Port	4	Power Jack
5	Terminal Holder for MT90 main unit only	6	Terminal Holder for MT90 with rubber boot or pistol grip


Installing the Battery

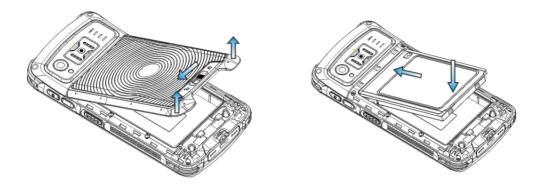

Step 1: Slide the battery cover latch to the unlock position and remove the cover.

Step 2: Insert the battery as indicated into the battery compartment, with its metal contacts facing down and lining up with the metal contacts on the inside of the terminal.

Removing the Battery

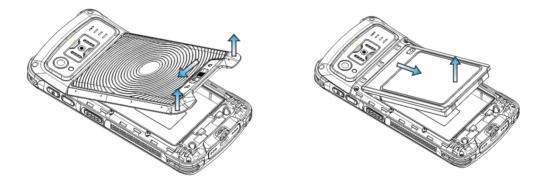

Step 1: Hold down the Power key for 5 seconds and then tap "Power off" to turn off the terminal. Slide the battery cover latch to the unlock position and remove the cover.

Step 2: Remove the battery.

Charging the Battery

There are two methods to charge the battery.

♦ Charge with AC adapter


Connect the MT90 to a power outlet using the included AC adapter. When the terminal's battery is less than 5%, it takes about 5 hours to fully charge it (The terminal is shut down or in sleep mode).




Note: Low battery may result in malfunction of the terminal. Before your first use, charge the battery for at least 6 hours.

♦ Charge with cradle

- 1. Firmly press the appropriate terminal holder into the charging slot on the cradle until a click is heard. Then insert the MT90 (with or without rubber boot/pistol grip) into the terminal holder.
- 2. Connect the cradle to a power outlet using the included AC adapter and DC charging cable.

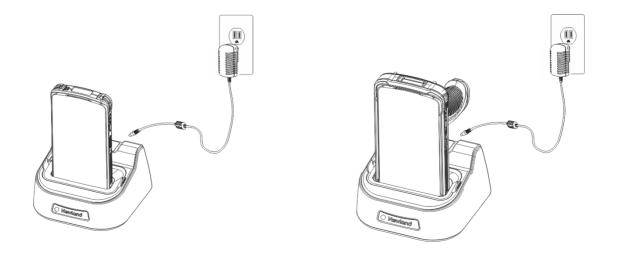

When charging the MT90 with AC adapter or cradle, the user is notified the charging statuses by the LEDs on the terminal.

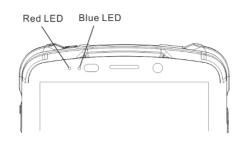

LEDs on the MT90		
Blue LED on	Fully charged	
Red LED on	Charging in progress	
Red LED flashes constantly	Low-battery alert	


Communicating with PC


Step 1: Connect the Micro USB port on the MT90 to your computer with the included USB cable.

Step 2: Switch the MT90 on. On the Home screen, swipe from top to bottom with one finger in one smooth motion to open the notification bar as shown below.


Step 3: Tap "Connected as a media device"".

Step 4: Select Media device (MTP). Navigate to the "My Computer" section of your computer and look for the newly added drive. Double-click it and you will be connected to the MT90. Then you may handle the files on the terminal through your computer.

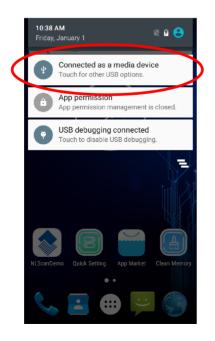

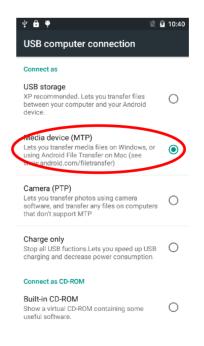

Installing the Micro SD Card/SIM Card

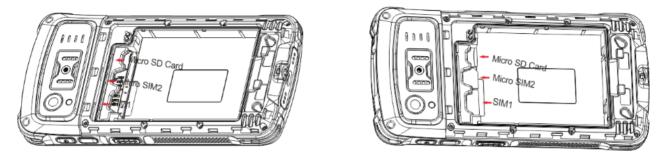

Step 1: Slide the battery cover latch to the unlock position and remove the cover.

Step 2: Insert the Micro SD card/ SIM card/ Micro SIM card into the corresponding slot, with its metal contacts facing down.

Installing a Pistol Grip on the MT90



Installing a Rubber Boot on the MT90





Chapter 3 Basics

Introduction

This chapter provides the basics of setting and using the MT90.

Switching On/ Rebooting/ Switching Off the MT90

After installing the SIM card and battery and having the MT90 fully charged, you may switch the terminal on.

Switch the MT90 on: Hold down the Power key on the right side of the terminal until the terminal vibrates. Note that the initialization is going to take some time before the MT90 displays the Home screen.

Reboot the MT90: Hold down the Power key on the right side of the terminal until the window below pops up, then tap "reboot".

Switch the MT90 off: Hold down the Power key on the right side of the terminal until the window below pops up, then tap "Power off".



Locking/Unlocking the MT90

Lock the MT90: Briefly press the Power key on the right side of the terminal. If no operation is performed on the MT90 for a preset period of time, the MT90 locks automatically. You can change how long it takes for the MT90 to lock.

Unlock the MT90: Briefly press the Power key on the right side of the terminal.


Home Screen

View another Home screen: Swipe left or right.


Go to the Home screen: Press the Home key on the front panel of the terminal.

Open an app: Tap it.

View all apps/Open apps list: Tap

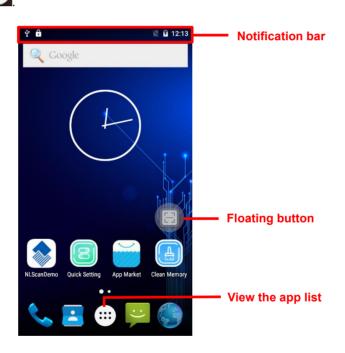

Add an app icon to the Home screen: Tap

 

the Home screen and then drag it into a blank area.

Delete an app icon on the Home screen: Tap and hold your desired app on the Home screen until "X Remove" appears, then drag the app into it. Note that this operation only removes the icon from the Home screen. To remove the app from the MT90, see the **Uninstalling App** section.

Status Icons

The icons in the notification bar at the top of the screen give information about the MT90.

Status Icon	Description	Status Icon	Description
♥	WLAN on	.4	Signal strength
*	Bluetooth on	4	Airplane mode on
Ψ	USB connected	Ψ	USB debugging
×C	Missed calls	F	Battery charging in progress
ŢĊ	New messages		Battery fully charged
M	NFC on	\otimes	Silent mode on
ıDı	Vibrate on		

Installing App

Use one of the following methods to install a new app on the MT90:

- 1. Download an APK file from online app store and install it.
- 2. Download software package onto a Micro SD card or PC and copy it to your terminal. Then install it with File Manager.
- 3. Install a new app using a mobile assistant (such as Baidu Mobile Assistant) installed on the PC.


Uninstalling App

Follow the procedure below to remove an app from the MT90:

Tap on the Home screen to view all apps. Tap and hold your desired app until a trash bin appears at the top left corner of the screen, then drag the app into the trash bin.



Date & Time

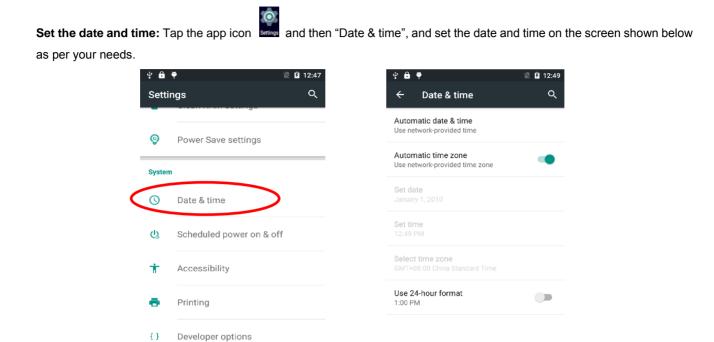

Display




G

Ahout nhone


Tap the app icon and then "Display", and set the brightness, wallpaper, sleep timer, front size and other parameters on the screen shown below as per your needs.

∲ 6	🏺 🖹 🖺 1:	2:52	¥ 🔒	φ	🖹 🖻 12:53
Setti	ngs	<u>م</u>	÷	Display	Q
	More		Persor	nalize 'ision™	
Device	•			y picture quality optimization	
•	Display		Wallp Defaul		
۰	Sound & notification		Display Bright	y tness level	
	Storage			tive brightness ize brightness level for available	
	Battery		Sleep After 1	minute of inactivity	
•	Apps	_	Daydr Clock	ream	
Persor	nal		Font s		

Ringtones

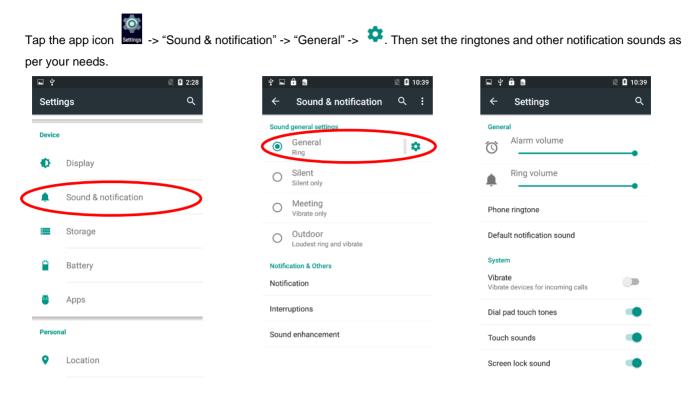

Restoring Factory Settings

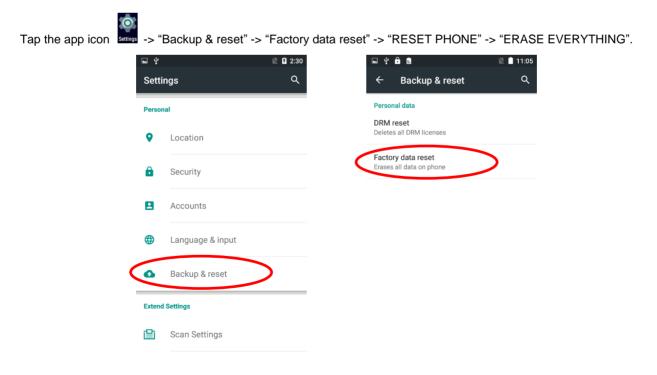

This will erase all data from your phone's internal storage, including:	Erase all your personal informat and downloaded apps? You can' reverse this action!
 Your Google account System and app data and settings Downloaded apps Music Photos Other user data 	erase everything

After this operation, the terminal will be reset to factory defaults and all the personal data on the internal storage, such as music and photos, will be deleted.

Language & Input Method

Tap the app icon -> "Language & input". Then set the language and input method as per your needs.

	■ \$	🖹 💆 2:	30	■ ‡	â	🖹 🗋 11:50
	Setti	ngs C	2	÷	Language & input	۹
	Person	al		Langı Englis	uage h (United States)	
	•	Location			checker id Spell Checker (AOSP)	
	Ô	Security		Perso	onal dictionary	
		Accounts			eard & input methods	
0		Language & input			nt Keyboard h (US) - Android Keyboard (AOSP)	
				Andro Englis	bi d Keyboard (AOSP) h (US)	
	4	Backup & reset		Speec	h	
	Extend	Settings		Text-t	to-speech output	
	虘	Scan Settings		Mouse	e/trackpad	
				Point	er speed	

Floating Button Settings

Tapping the floating button can perform tasks such as scanning barcode (Scan), turning on/off flashlight (Flashlight), taking a screenshot (Screen snapshot), turning off screen (Screen off), or going to the Home screen (Home).

Show/Hide the floating button: Tap the app icon -> "Screen floating-point settings" -> select/unselect "Show float box".

ΨG	ÌΨ	🖹 🖻 1:10	ድ 🖨 🏘	🖹 🖻 1:11
Set	tings	Q	Float box settings	
۲	Language & input		Show float box	
			Fuction with float box:	
0	Backup & reset		Scan	
			Scan Flashlight	
Exte	nd Settings		Screen snapshot	
i 🕒 i	Scan Settings		Screen off	
	Scan Settings		Home	
	Screen floating-point set	tings		E
_				-
	Clean RAM settings			
ø	Power Save settings			
~	Fower Save Settings			
Syst	em			

Clearing the App Cache

Tap the app icon then "Clean RAM settings", tap the ON/OFF slider to ON, and then select the app(s) whose cache you DO NOT want to clear. The unselected apps' cached data will get cleared when the terminal enters the sleep mode.

ŧ	🖹 🖬 1:10	4 6 4		🖹 💈 1:18
ngs	Q	i 👘 No	t to be cleaned up AP	ON
Language & input			Contacts	
Backup & reset			Phone	
Settings		~		
Scan Settings		Ę	Messaging	
Screen floating-point setti	ings	0	Settings	
Clean RAM settings	>			
Power Save settings		8	Admin Tool	
		9	Browser	
	Ings Language & input Backup & reset Settings Scan Settings Screen floating-point sett Clean RAM settings Power Save settings	Q Language & input Backup & reset Settings Scan Settings Screen floating-point settings Clean RAM settings Power Save settings	Ings Image: Constraint of the section of the s	Image Settings Settings Scan Settings Screen floating-point settings Clean RAM settings Power Save settings Sources Settings Settings Screen floating-point settings Settings Settings Settings Settings Settings Screen floating-point settings Settings

Power Saving Settings

Tap the app icon then "Power Save settings". Then you can make changes to the power saving settings below to suite your needs.

Screen Backlight Dim: The screen will go dim to save the battery when the terminal scans barcodes continuously for 2 minutes or when it stays idle for 2 minutes (even if the sleep timer has been set to a value greater than 2 minutes).


Stop Sleep for Scan Key: This feature allows you to stop the screen from going black while letting it remain dim after a certain period of inactivity by pressing the Scan key. To brighten the screen, press any other key on the terminal or tap the screen.

The flash is forbidden when the electric quantity is lower than this value: When the battery level is below the level set here, users are not allowed to turn on the flashlight.

Power Supply Plan:

1. Saving mode -- The terminal's built-in scanner turns off automatically after 3 seconds of inactivity.

2. High-performance mode -- The terminal's built-in scanner turns off automatically after 15 seconds of inactivity.

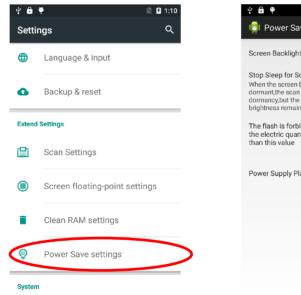




Shortcuts to Apps

Create a shortcut to an app on your Home screen: Tap in the Home screen. Tap and hold your desired app and then drag it into the Home screen.

Widgets

 View all widgets: Tap and hold on a blank area of the Home screen and then tap



Add a widget icon to the Home screen: Tap and hold the Home screen and then tap	WIDGETS	. Tap	and hold	your de	esired
widget and then drag it into the Home screen.					

Chapter 4 Scanning Barcodes

Introduction

This chapter includes scanning tips and instructions for setting up the scanner.

Scanning 1D Barcode

Adjust the scan angle or the distance between the MT90 and the target barcode to ensure the length of laser beam is roughly 8mm greater than that of the barcode, as shown below.






Correct	Wrong

Scanning 2D Barcode

Adjust the scan angle and the distance between the MT90 and the target barcode to make them fall into the following ranges:

- 1) Point the MT90's focus lamp at the center of the barcode.
- 2) Move the MT90 until you find the appropriate scan distance.
- 3) Optimum scan angles: Skew (α)< 45° (0° preferably) Pitch (γ)< 45° (5°- 20° preferably) Roll (β)= 0° - 360°

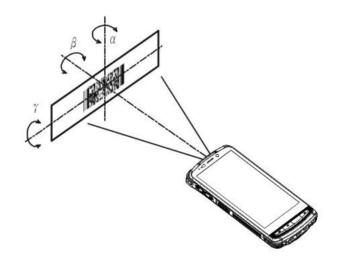


Programming Scanner


Tap the app icon the "Scan Settings", or tap the app icon on the Home screen then . Then configure the

scanner parameters as per your actual needs.





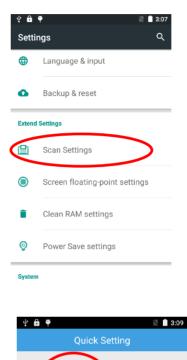

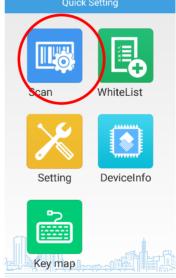

Enable Scan

Check or uncheck the "Enable scan" item to enable or disable the scanning feature of the MT90

	÷ 6	φ	🗟 🗎 3:10	
	<	Scanne	r	
		Setting	Test	
<		Enable scan		>
	3	Output Mode Fill in EditText directly		
		Scan Mode Pulse mode		
	7	Scan Trigger		
	Am	Prefix & Suffix		
	·B·	Good Read Indicato	r	
		Encoding GBK		
	ľ	data edit		
		Symbologies CM25		

Output Mode

The MT90 provides three output modes: Simulate keystroke, Output via API and Fill in EditText directly.

- Simulate keystroke: Output scanned data to keyboard buffer to simulate keyboard input.
 Character interval (ms): A character interval of 0-100 milliseconds may be placed between the transmission of each character of scanned data.
- 2. Output via API: Application acquires scanned data by receiving system broadcasts.
- 3. Fill in EditText directly: Output scanned data at the current cursor position in EditText.

Overwrite output: Clear the text input box before sending the barcode currently scanned to make sure only most recently scanned data is present in the text input box. This feature is available only when **Simulate keystroke** or **Fill in EditText directly** is selected.

Output enter-event: Send an Enter key after each barcode scanned.

		🛈 💎 🛆 🖬 2:43
<	Scanne	r
	Setting	Test
	🗷 Enable scan	
	Output Mode Fill in EditText directly	
E	Scan Mode	
9	🖻 Scan Trigger	-
	Prefix & Suffix	E
	🖁 Good Read Indicato	r
	Encoding GBK	
	谢 data edit	
E	Symbologies	

Scan Mode

The MT90 provides three scan modes: Level mode, Continuous mode and Pulse mode.


- 1. Level mode: Press and hold the scan trigger to start a decode session which continues until the trigger is released or the decode session timeout expires or a barcode is decoded.
- Continuous mode: Press the scan trigger to continuously read barcodes. To suspend or resume scan operation, simply
 press the scan trigger.

Scan interval (ms): This parameter sets the timeout between decode sessions.

Masked repeat interval (ms): This parameter sets the time period before the scanner can read the same barcode a second time.

 Pulse mode: Press the scan trigger to start a decode session which continues until the decode session timeout expires or a barcode is decoded.


Decode session timeout (ms): This parameter sets the maximum time decode session continues during a scan attempt.

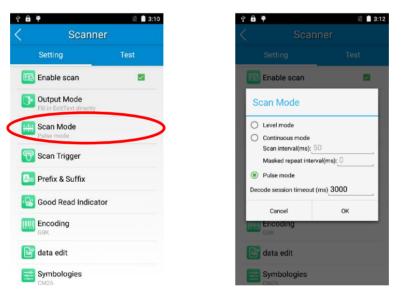

Scan Trigger


The three scan keys on the terminal and the trigger on the pistol grip can all serve as scan trigger. Enable or disable them as per your actual needs.

- 1. SCAN key: Use the Scan key on the front panel of the terminal as scan trigger.
- 2. Left/Right SCAN key: Use the Scan key on the left/right side of the terminal as scan trigger.
- 3. Background SCAN key: Use the trigger on the pistol grip attached to the terminal as scan trigger.

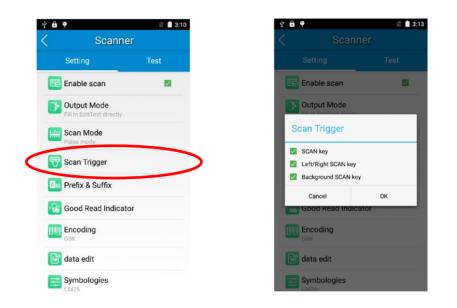

Prefix & Suffix

To set the prefix/suffix, enter the hexadecimal value of a desired prefix/suffix and then tap "OK". For example, if you want to add a Line Feed character after each barcode, set the suffix to "0A"; if you want to add a Carriage Return character after each barcode, set the suffix to "0D".

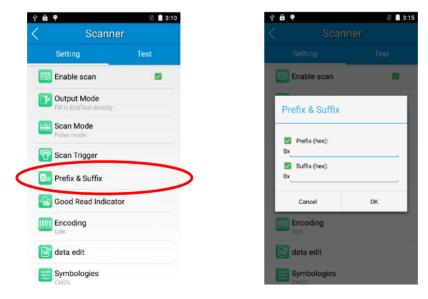

Good Read Indicator

The terminal can use sound/ vibration/ LED to indicate a good read. Choose one or more options as per your actual needs.


- 1. Sound: The MT90 issues a short beep to indicate a good read.
- 2. Vibrating: The MT90 vibrates to indicate a good read.
- 3. LED: The blue LED on the MT90 flashes once to indicate a good read.

* 🖬	φ	🗟 🗎 3:10
<	Scanne	er
	Setting	Test
	Enable scan	
ŀ	Output Mode Fill in EditText directly	
1.1.1	Scan Mode	
T	Scan Trigger	
A	Prefix & Suffix	
•	Good Read Indicat	or
	Encoding GBK	
	data edit	
Î.	Symbologies	

Encoding

Choose a character encoding to interpret barcode data.

- 1. UTF-8: Dominant Unicode encoding.
- 2. GBK: A character encoding for Chinese characters.
- 3. ISO-8859-1: A common character encoding which covers Western European languages.

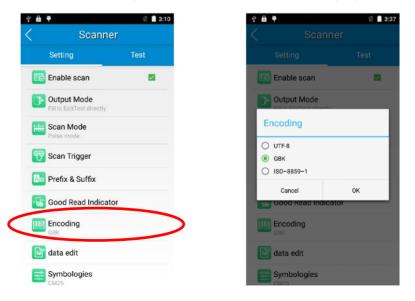

Data Edit

This feature allows you to edit barcode data with a script.

Tap "load script" and then select the desired script file on the terminal, or scan the 2D barcode that contains a script, to load the script. Then select "exec script" and tap "OK".

÷ 6	i Ψ	🖹 🗎 3:10
<	Scanner	
	Setting	Test
	Enable scan	
	Output Mode Fill in EditText directly	
11	Scan Mode	
ৰ্	🛚 Scan Trigger	
A	Prefix & Suffix	
۰F	Good Read Indicator	
ĮĮ.	Encoding GBK	
	data edit	
To La	Symbologies	

Symbologies

Note that supported symbologies depend on the scan engine integrated in the terminal. Here we will take CM26 for example.

1D code: Enable or disable 1D symbologies and set other barcode parameters.

2D code: Enable or disable 2D symbologies and set other barcode parameters.

₽ 6 9		🖹 🗋 3:10
	Scanner	
Settin	g	Fest
📧 Enable	e scan	
	t Mode	
	ditText directly	
Scan I Pulse m		
😚 Scan T	Trigger	
Prefix	& Suffix	
🐻 Good	Read Indicator	
Encod	ling	
data e	dit	
-	ologies	
CM25		

Other: The features listed here are designed to improve the scanning performance and energy efficiency of the terminal.

- 1. **Central area decoding:** When selected, the terminal only decodes the barcode aimed squarely by the aiming pattern. It is advised to select it to insure that only the desired barcodes are read if multiple barcodes are placed closely together.
- 2. **Noise reduction:** This feature is designed to reduce noise in images produced by the terminal. However, the terminal shows a slight decrease in scanning speed when using this feature. It is recommended to enable it only when necessary.
- 3. Exposure level

DOF preferred: Select this option when you prefer a larger DOF (depth of field).

Motion tolerance preferred: Select this option when you scan barcodes on a moving object.

Auto adaptive: Select this option when you want the terminal to automatically adjust the exposure while balancing its DOF and motion tolerance.

4. Power plan:

Power saving: The terminal's built-in scanner turns off automatically after 3 seconds of inactivity. **High-performance**: The terminal's built-in scanner turns off automatically after 15 seconds of inactivity.

🖞 🔒 🏺		🖹 🗎 3:44	Ŷ	ê 🏺		🖹 🗎 3:44	÷ 🔒 🕈		🖹 🗎 3
<	Symbologies		<	(Other		<	Other	
1D code	e 2D code	other		Noise Reduction			Noise Reduct Exposure Level	ion	
Centra	I Area Decoding			OF preferred			DOF preferred		
Other	(DETAIL	ι Γ	OF preferred			The Power Plan Power saving		
			1	Auto adaptive			Power saving		
			N	Notion tolerance p	referred		High-perform	ance	
				Cancel	ок		Cance		ОК

Chapter 5 Bluetooth

This chapter describes how to connect the MT90 to other Bluetooth device.

You can set up a Bluetooth connection between the MT90 and other Bluetooth devices, such as PC, mobile phone. Note that Bluetooth connection works better if there are no obstacles between them.

Before you can use a Bluetooth device with the MT90, you must first pair them.

- 1. Make the Bluetooth device visible to the MT90.
- 2. Tap the app icon then "Bluetooth", and turn Bluetooth on to search for available Bluetooth devices.
- 3. Select the device from the search results to pair.
- 4. If prompted, input the pairing code and then tap "OK"; or if the pairing code is given automatically, then tap "PAIR".

🔒 🔭 🖹 🖬 2:37
ings Q
ess & networks
Wi-Fi Avai
Turbo download
Bluetooth
SIM cards
Data usage is vis is option

Unpair/rename a paired Bluetooth device: Tap the app icon then "Bluetooth", and turn Bluetooth on. Tap 🍄 beside

the paired Bluetooth device. To rename the paired Bluetooth device, edit its name manually and then tap "OK". To unpair it, tap "FORGET".

Chapter 6 Wi-Fi

Introduction

This chapter describes how to connect the MT90 to a Wi-Fi network.


Wi-Fi Settings

Join a Wi-Fi network:

- 1. Tap the app icon then "Wi-Fi", and turn Wi-Fi on to find available Wi-Fi networks. If Wi-Fi is already ON, then the terminal will automatically scan for available networks.
- 2. Tap a network and then enter the password.


 \bigcirc

3. Tap "CONNECT".

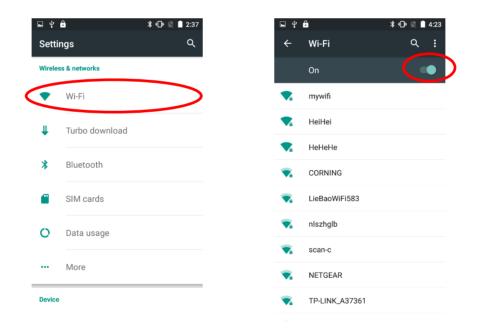

IP Settings

To set the IP, follow the first two steps of joining a Wi-Fi network, check the "Advanced options" item, tap "DHCP" and choose your desired option.

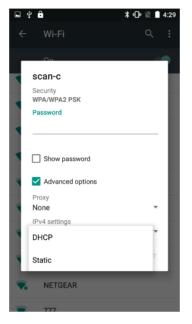


Chapter 7 Mobile Network

Introduction

The MT90 can also use 4G network to connect to the internet. To establish 4G connection, you must have a SIM card installed in your MT90.

Mobile Network Settings


If no Wi-Fi networks are available, or if you have turned Wi-Fi off, then the MT90 connects to the Internet via your cellular data network when available.

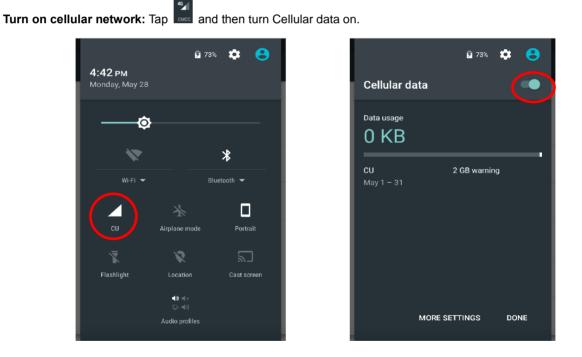

APN Settings

If you cannot connect to the internet when using your terminal's cellular data, you may need to change your APN settings on the MT90 to fix it:

1. Go to Settings -> More -> Cellular networks -> Access Point Names.

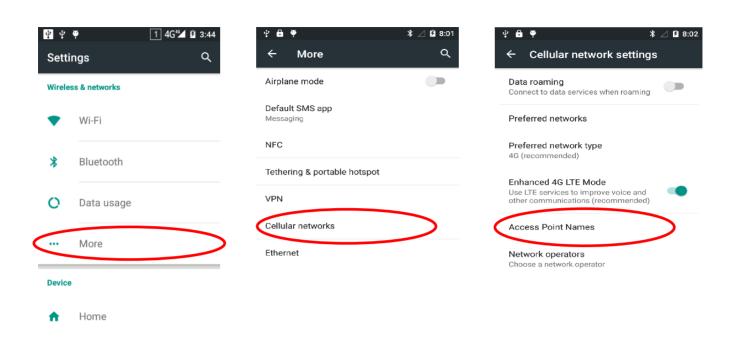

2. Tap 🗐 in the top right corner of the screen or tap the carrier of your SIM card on the screen. Then manually enter the

APN settings. You can contact your carrier or visit their website to get the correct APN settings, or check the APN settings on a mobile device that can access the internet using the SIM card.

2	φ.	\$ ⊿ 🖬 8:03
÷	APNs C	२ 🕀 ।
中国 3gnet	朕通 3g 网络 (China Unicom) 💿
中国 3gwap	送通 Wap 网络 (China Unicc ɔ	^{im)} O
中国 3gwap	朕通 3g 彩信 (China Unicom ∋))
I MS ims		

3. Press the Return key on the MT90 to go back to the previous screen and then select the APN you just added.

Chapter 8 Admin Tool

Introduction

The Admin Tool app is used to specify the apps that users can run on the MT90.


Launching the Admin Tool

Tap the app icon

dmin Tool

to launch the admin tool and enter the User mode.



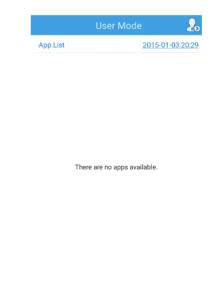

Switching between User Mode and Admin Mode


To switch from the User mode to the Admin mode, tap in the top right corner of the screen and then enter the password (default: 112233). It is advised to change the password at first login.

User Mode	Authentication	< Admin Mode 🤰
App List 2015-01-03 2022		Settings 2015-01-03 20:37 App Manager Select or deselect the apps available to normal users. Select or deselect the apps available to normal users. Reset Password Change the Admin password. >
There are no apps available.	Enter password finter password Default: 112233 2015-01-03 20:37 OK CANCEL	

When in the Admin mode, you may set the following parameters as per your actual needs.

- 1. App Manager: Select or deselect the apps available to normal users.
- 2. Reset Password: Change the Admin password.

To switch from the Admin mode to the User mode, simply tap *b* in the top right corner of the screen.

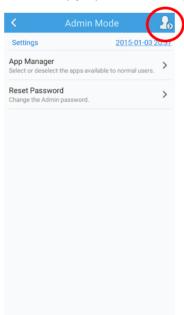

Chapter 9 Whitelist Manager

Introduction

The Whitelist Manager app is used to specify the apps that users can install on the MT90.

Logging in to Whitelist Manager


Tap the app icon

on the Home screen then

, enter the password (default: 112233), and tap "Login" to log in to list Ma.

* 🖹 🖬 11:42

the whitelist manager. Then set up your whitelist as per actual needs.

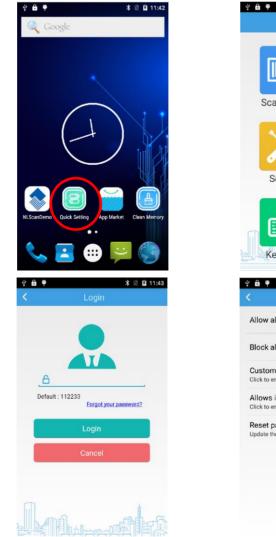

		k Setting	
5	G can	WhiteList	
	Setting	DeviceIn	fo
	Key map		
<	Whitel	ist Manager	
Alloy	w all apps		•
	k all apps		
Bloc		ne installation	
Bloc Cust Click	com allows the to enter the edit	page In by signatur	

Setting the Whitelist

Block all apps: Block users from installing any Android app on the MT90.


Allow all apps: Allow users to install any Android app on the MT90.

Custom allows the installation package: Allow users to install specific APK file(s) on the MT90. To specify the APK(s) that users can install, follow the steps below: After logging in to the whitelist manager, tap the "Custom allows the installation package" item. On the "Package name prefixs" screen, enter the name of the desired APK file using the on-screen keyboard (To add another app, tap \bigcirc on the on-screen keyboard and enter the name of that APK file), select the "Enable" checkbox and then tap "Save".

₽ ♥ 1 *	🕒 🖹 💈 5:26
K Whitelist Mana	ger
Allow all apps	
Block all apps	
Custom allows the insta	Ⅲ □
Allows installation by signal Click to enter the edit page	g
Reset password Update the login password	

Allows installation by signature: Allow users to install APK file(s) with specific signature(s) on the MT90. To specify the signature(s), follow the steps below: After logging in to the whitelist manager, tap the "Allows installation by signature" item. On the "Signature info" screen, tap is at the top right corner of the screen then "Add signature". Select the APK file which contains your desired signature. Tap "Save" on the "App details" screen. Then select the "Enable" checkbox.



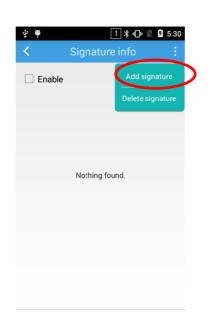




∲ ∳		1 🖇 🕕 🖹 🛿 5:32	
<	App de	tails	
Descrip	tion		
Wifi A	nalyzer		
Packag	e name		
com.farpr	oc.wifi.analyzer		
Signature Info			
5D:6B:91:8C:9B:AA:9F:7A:53:74:40:09:94:EC: 94:A2			
S	ave	Cancel	

Chapter 10 Others

Camera

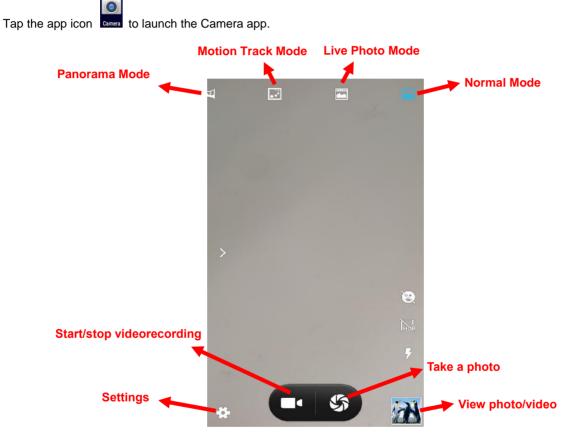

-#-

Tap it to reveal the parameters such as GPS location info, face beauty, exposure, scene mode and white balance and set those parameters as per your needs.

: Tap it to take a photo.



: Tap it to start/stop a video recording.




Tap the thumbnail image in the bottom right corner of the screen to view the photo or video saved.

You can also download a camera app from the Internet or develop an app for the camera feature.

GPS

Tap the app icon store then "Location", and then:

- 1. Turn Location on.
- 2. Tap "Mode" and then choose a location mode as per actual need.
- 3. Use a third-party map app or other GPS app to obtain location information.

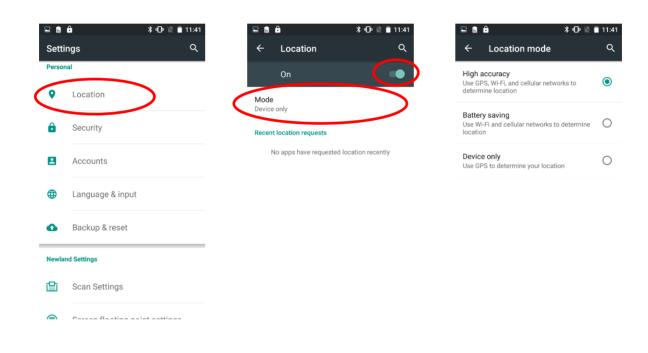


NFC (optional)

To enable the NFC feature, tap the app icon -> "More" -> "NFC", and then turn on NFC.

Then you can install an NFC writer on the MT90 to read and write NFC tags.

	û ♥ ttings	¥ 🖹 🖬 11:50 Q
	eless & networks	
•	Wi-Fi	
Ų	Turbo download	
*	Bluetooth	
	SIM cards	
0	Data usage	
\langle	More	>
Dev	rice	




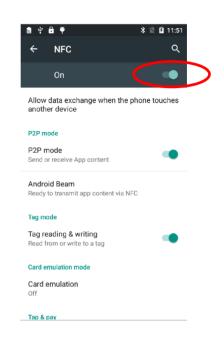

Memory Cleanup

 Press and hold the Home key on the keypad until the terminal displays the following screen and then tap up the memory.







Note: When your terminal becomes less efficiently after having run for extended periods of time, you may perform a memory cleanup or reboot the terminal to fix the problem.

Key Map

This app allows you to remap the keys on the terminal to function as a different key or to make them into shortcuts to launch an application.


Remap a key to another key (or app): Tap the app icon with the Home screen then

B



to start the app. Select the

key you want to remap, and then tap "keys" and select the key or key combination (or tap "apps" and select the app) to which you want to remap it.

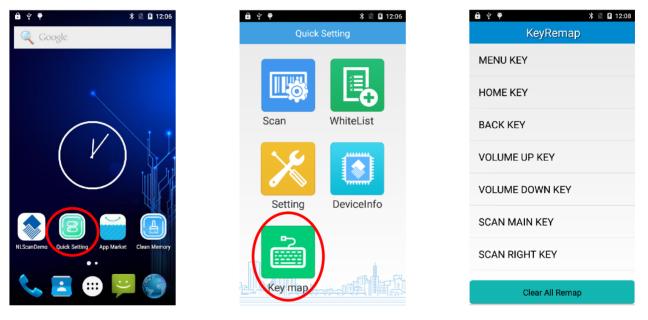

≜ ¥ ♥	* 🔟 🖬 12:06
< KeyRe	emap
keys	apps
🗌 ctrl 🔄 shift 🗌 alt	
KEYCODE_0	
KEYCODE_1	
KEYCODE_2	
KEYCODE_3	
KEYCODE_4	
KEYCODE_5	
KEYCODE_6	
KEYCODE_7	
KEYCODE_8	
KEYCODE_9	
Back	Clear

ê ₽ ♥			* 🖹 🖬 12:07
<	KeyR	emap	
ke	eys		apps
[]	Contacts		
K.	Phone		
	Messaging	9	
0 S	Settings		
less of the second seco	Admin Too	Ы	
Ва	ack	(Clear


Chapter 11 System Update

4

Update the system online: Tap the app icon -> "CHECK FOR UPDATES".





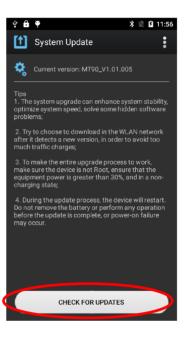

Chapter 12 App Development Guide

Development Environment

The MT90 runs on Android 5.1 operating system, so you should use Android SDK 5.1 or lower when developing apps for the MT90.

Use of Non-standard Interfaces

See Newland Android PDA API Handbook.

Chapter 13 Maintenance & Troubleshooting

Introduction

This chapter includes important safety and handling information and provides troubleshooting solutions for issues that might occur when using the terminal.

Important Safety & Handling Information

Disassembly and Retrofit

Do not attempt to disassemble or retrofit the terminal yourself. Unauthorized disassembly or retrofit will void the warranty.

External Power Supply

Use only the included AC adapter. Otherwise there is a risk of damage to the terminal.

Abnormal Situation

Keep the terminal away from fire or heat sources. If there is unusual odor, overheating or smoke during charging, immediately cut off the power and disconnect the AC adapter, and contact your dealer or Newland customer service center. Continued use in this case may result in fire or electric shock.

Drop Damage

If the terminal is damaged due to a drop from high place, immediately cut off the power and contact your dealer or Newland customer service center.

LCD Screen

Do not press against or strike the LCD screen. Otherwise it may damage the screen. When handling a cracked or shattered screen, do not touch the liquid that has leaked from it to avoid skin burn or infection.

Stacking Heavy Objects

Do not place heavy objects on the terminal as those objects may fall and cause injury.

Mounting Location

Do not place the terminal on unstable or uneven surfaces as it may fall and cause injury. Do not expose the terminal to humidity or dust as this may cause fire or electric shock. Do not expose the terminal to direct sunlight for extended periods.

Wireless Functionalities

Do not use the terminal's wireless functionalities where wireless device use is prohibited or where it may cause interference or danger, such as in aircrafts, petrol stations.

Use & Maintenance

- If the terminal cannot be switched on after experiencing a sudden or unexpected power loss or other abnormalities, remove and then reinstall its battery to reset the terminal.
- Do not throw, drop or strike the terminal. Doing so may damage the LCD display, interrupt running programs, cause data loss in memory and result in malfunction.
- Clean the scan window regularly. Do not touch it with hands. Scratched or smudged window may degrade reading performance.
- ♦ Do not tap the touch screen with sharp objects. Doing so may damage the screen or cause internal short circuits.
- Use only a dry soft cloth to clean the terminal. Cleaning it with wet cloth or benzene/ thinner/ other volatile chemicals may deform and shorten the service life of the keypad and shell of the terminal.
- ♦ Do not place the terminal facedown on any surface, or there might be misoperations.
- Sudden temperature drops may cause condensation on the shell which could cause malfunction. Care should be taken to avoid condensation. If condensation occurs, dry the terminal before use.

Battery Safety Guidelines

- ♦ Do not dispose of batteries in a fire as they may explode.
- The battery can be charged and discharged over 500 times. If the battery life is unreasonably short, please replace the battery with a new one.
- \diamond Use only the included battery and AC adapter.
- Do not continue to charge a battery that is fully charged. Overcharging will shorten battery lifespan. If a fully charged battery is not used, it will discharge slowly, which does not affect its normal use.
- ♦ Do not use damaged or faulty AC adapters or batteries.
- ♦ Properly dispose of and recycle batteries. Do not dispose of them as household garbage.

Troubleshooting

Problem		Possible Cause & Solution	
Туре	Description	Possible Cause & Solution	
Keypad	Unresponsive keypad or incorrect response to any key entry.	This problem may be caused by unreliable cable connection between keypad and mainboard or keypad malfunction. Please contact Newland after-sales service.	
	Charging LED is OFF when charging.	Ensure the AC adapter is plugged in properly.	
Battery	Noticeably short battery life.	 Check the battery level. If the battery is almost depleted, recharge it. Replace the battery if it is faulty. 	
	Fully charged battery is depleted after the terminal is switched on.	If the battery is faulty, replace it with a new one.	
USB	USB communication failure	 Ensure that the USB cable connections are secure. Ensure that there is no contaminant inside the Micro USB port. If the problem still remains, please contact the after-sales service center. 	
LCD Screen	No display	 Ensure the terminal is switched on. If the terminal is in sleep mode, press the Power key to wake it up. Check the battery level. If the battery is depleted, recharge it. Ensure that the battery is properly installed. Replace the battery if it is faulty. If the problem still remains, please contact the after-sales service center. 	
	Cannot switch on	 Check the battery level. If the battery is depleted, recharge it. Switch the terminal on after using the included AC adapter to connect it to a power outlet. If the problem disappears, then continue to charge the terminal. If the problem remains after charging the terminal for a while, replace the battery. 	
System	System halted	 The problem may be caused by bugs of downloaded apps. Ensure that only reliable apps are used. The problem may be caused by a sudden or unexpected power loss. Remove and then reinstall its battery to reset the terminal. 	



Newland Auto-ID Tech. Co., Ltd. (Headquarters) 3F, Building A, No.1, Rujiang West Rd., Mawei, Fuzhou, Fujian, China 350015 Tel: +86 - (0) 591-83978605 Fax: +86 - (0) 591-83979216 E-mail: contact@nlscan.com Web: www.newlandaidc.com

Newland Europe BV

Rolweg 25, 4104 AV Culemborg, The Netherlands Tel: +31 (0) 345 87 00 33 Fax: +31 (0) 345 87 00 39 Email: <u>info@newland-id.com</u> Web: <u>www.newland-id.com</u> Tech Support: <u>tech-support@newland-id.com</u>

Newland North America Inc.

46559 Fremont Blvd., Fremont, CA 94538, USA Tel: 510 490 3888 Fax: 510 490 3887 Email: <u>info@newlandna.com</u> Web: <u>www.newlandamerica.com</u>

Newland Latin America

Tel: +1 (239) 598 0068 Fax: +1 (239) 280 1238 Email: <u>info@newlandla.com</u> Web: <u>www.newlandamerica.com</u>

Newland Taiwan Inc. 7F-6, No. 268, Liancheng Rd., Jhonghe Dist. 235, New Taipei City, Taiwan Tel: +886 2 7731 5388 Fax: +886 2 7731 5389 Email: info@newland-id.com.tw Web: www.newland-id.com.tw

Newland Korea

Biz. Center Best-one, Jang-eun Medical Plaza 6F, Bojeong-dong 1261-4, Kihung-gu, Yongin-City, Kyunggi-do, South Korea Tel: +82 10 8990 4838 Fax: +82 70 4369 0009 Email: <u>th.sung@newland-id.com.tw</u> Web: <u>www.newlandaidc.com/kor/</u>