



NLS-EM3296 V4
OEM Scan Engine
User Guide

Disclaimer

© 2021 Fujian Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty provided by Fujian Newland Auto-ID Tech. Co., Ltd.

All pictures in this manual are for reference only and actual product may differ. Regarding to the product modification and update, Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Fujian Newland Auto-ID Tech. Co., Ltd or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from Newland.

Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Fujian Newland Auto-ID Tech. Co., Ltd.

3F, Building A, No.1, Rujiang West Rd., Mawei, Fuzhou, Fujian, China 350015

<http://www.newlandaidc.com>

Revision History

| Version | Description | Date |
|---------|--|-------------------|
| V1.0.0 | Initial release. | April 25, 2016 |
| V1.0.1 | <ol style="list-style-type: none"> 1. Added the Specify Decoding Area (Top, Bottom, Left, Right) feature in Chapter 4. 2. Added Chapter 10 Batch Programming. <p>Note: You must have firmware version V1.00.066 or later to use the new features above.</p> | September 9, 2016 |
| V1.0.2 | <ol style="list-style-type: none"> 1. Changed the range of Decode Session Timeout to 100ms - 3,600,000ms. 2. Added the EAN-13 Beginning with 290 Add-On Code Required, EAN-13 Beginning with 378/379 Add-On Code Required, EAN-13 Beginning with 414/419 Add-On Code Required, EAN-13 Beginning with 434/439 Add-On Code Required, EAN-13 Beginning with 977 Add-On Code Required, EAN-13 Beginning with 978 Add-On Code Required, EAN-13 Beginning with 979 Add-On Code Required, Code 32 (Italian Pharma Code), Code 32 Prefix, Transmit Code 32 Check Character and Transmit Code 32 Start/Stop Character features in Chapter 8. <p>Note: You must have firmware version V1.00.083 or later to use the new features above.</p> | February 22, 2017 |
| V1.0.3 | <ol style="list-style-type: none"> 1. Added the Reset Timeout On/ Off features in Chapter 3. 2. Added the JAN Code for Magazines/ Books, Enable/Disable PDF417 ECI Output, Enable/Disable QR ECI Output, Enable/Disable Data Matrix ECI Output and Enable/Disable Chinese Sensible Code ECI Output features in Chapter 8. <p>Note: Firmware version V1.00.106 or later is required for the new features above.</p> | November 30, 2017 |
| V1.0.4 | Changed the default communication interface to TTL-232. | December 12, 2017 |
| V1.0.5 | Corrected "USB COM Port Emulation" to "USB CDC" in Chapter 2. | April 22, 2019 |
| V2.0.0 | Updated the hardware version of device as EM3296 V3. | August 12, 2019 |
| V3.0.0 | <ol style="list-style-type: none"> 1. Added the Data Packing section. 2. Added the Appendix 4. 3. Updated the hardware version of device as EM3296 V4. 4. Deleted the Power-Saving Mode section in Chapter 2. | November 12, 2020 |

| | | |
|--------|--|------------------|
| | <p>5. Deleted the Chinese Sensible Code section in Chapter 8.</p> <p>6. Deleted the JAN section in Chapter 8.</p> <p>7. Correct the maximum length of QR code as 6144.</p> <p>8. Corrected AIM ID of EAN-8 ,“]E4...]E1...” and “]E4...]E2...” as “]E4”.</p> <p>9. Added the Aztec section in Chapter 8.</p> <p>10. Updated “Custom Prefix”, “Custom Suffix” and “Terminating Character Suffix” section in Chapter 7.</p> <p>11. Set the default sensitivity as enhanced sensitivity.</p> | |
| V3.0.1 | 1. Added the Febraban section in Chapter 8. | January 12, 2021 |

Table Of Contents

| | |
|---|----------|
| Revision History | 3 |
| Chapter 1 Getting Started | 1 |
| Introduction | 1 |
| About This Guide | 1 |
| Connecting EVK to PC..... | 1 |
| Barcode Scanning..... | 2 |
| Barcode Programming | 2 |
| Factory Defaults..... | 3 |
| Custom Defaults | 3 |
| Inquire Product Information..... | 3 |
| Chapter 2 Communication Interfaces | 4 |
| TTL-232 Interface | 4 |
| Baud Rate | 5 |
| Parity Check..... | 6 |
| Data Bit | 6 |
| Data Bit & Parity Check..... | 7 |
| Stop Bit | 7 |
| USB Interface (Optional)..... | 8 |
| USB Enumeration | 8 |
| USB HID-KBW | 8 |
| Polling Rate..... | 9 |
| USB Country Keyboard Types | 10 |
| Beep on Unknown Character..... | 12 |
| Inter-Keystroke Delay..... | 12 |
| Convert Case | 13 |
| Emulate ALT+Keypad | 14 |
| Function Key Mapping | 15 |
| Emulate Numeric Keypad | 16 |
| Code Page | 16 |
| USB CDC..... | 17 |
| USB HID-POS..... | 17 |

| | |
|--|-----------|
| Introduction | 17 |
| Access the Engine with Your Program..... | 18 |
| Acquire Scanned Data | 18 |
| Send Data to the Engine | 18 |
| VID/PID | 19 |
| Chapter 3 Scan Mode..... | 20 |
| Batch Mode..... | 20 |
| Trigger Mode | 21 |
| Decode Session Timeout..... | 21 |
| Level Trigger/Pulse Trigger..... | 22 |
| Auto Sleep | 22 |
| Timeout between Decodes (Same Barcode) | 23 |
| Sense Mode..... | 24 |
| Decode Session Timeout..... | 24 |
| Image Stabilization Timeout..... | 25 |
| Timeout between Decodes | 25 |
| Timeout between Decodes (Same Barcode) | 26 |
| Sensitivity..... | 27 |
| Continuous Mode..... | 28 |
| Decode Session Timeout..... | 28 |
| Timeout between Decodes | 28 |
| Timeout between Decodes (Same Barcode) | 29 |
| Chapter 4 Scanning Preferences | 30 |
| Introduction | 30 |
| Decode Area..... | 30 |
| Whole Area Decoding | 30 |
| Specific Area Decoding..... | 30 |
| Specify Decoding Area..... | 31 |
| Chapter 5 Illumination & Aiming | 33 |
| Illumination..... | 33 |
| Aiming..... | 34 |
| Chapter 6 Beep & LED Notifications..... | 35 |
| Startup Beep | 35 |

| | |
|--|----|
| Good Read Beep for Non-programming Barcode | 35 |
| Beep Type..... | 36 |
| Beep Volume | 36 |
| Beep on Unknown Character | 37 |
| Good Read Beep for Programming Barcode | 37 |
| Good Read LED..... | 37 |
| Transmit NGR Message | 38 |
| Edit NGR Message | 38 |

Chapter 7 Prefix & Suffix 39

| | |
|---|----|
| Global Settings | 40 |
| Enable/Disable All Prefix/Suffix..... | 40 |
| Prefix Sequences..... | 40 |
| Custom Prefix | 41 |
| Enable/Disable Custom Prefix | 41 |
| Set Custom Prefix | 41 |
| AIM ID Prefix..... | 42 |
| Code ID Prefix | 42 |
| Restore All Default Code IDs | 42 |
| Modify Code ID | 43 |
| Custom Suffix | 46 |
| Enable/Disable Custom Suffix..... | 46 |
| Set Custom Suffix | 46 |
| Terminating Character Suffix | 47 |
| Enable/Disable Terminating Character Suffix | 47 |
| Set Terminating Character Suffix | 48 |
| Data Packing | 49 |
| Introduction | 49 |
| Data Packing Options | 49 |

Chapter 8 Symbologies 51

| | |
|--------------------------------------|----|
| Global Settings | 51 |
| Enable/Disable All Symbologies | 51 |
| Enable/Disable 1D Symbologies..... | 51 |
| Enable/Disable 2D Symbologies..... | 51 |
| Video Reverse | 52 |
| 1D Symbologies..... | 53 |

| | |
|--|----|
| Code 128 | 53 |
| Restore Factory Defaults | 53 |
| Enable/Disable Code 128 | 53 |
| Set Length Range for Code 128 | 53 |
| GS1-128 (UCC/EAN-128) | 54 |
| Restore Factory Defaults | 54 |
| Enable/Disable GS1-128..... | 54 |
| Set Length Range for GS1-128..... | 54 |
| AIM-128 | 55 |
| Restore Factory Defaults | 55 |
| Enable/Disable AIM-128 | 55 |
| Set Length Range for AIM-128 | 55 |
| EAN-8 | 56 |
| Restore Factory Defaults | 56 |
| Enable/Disable EAN-8 | 56 |
| Transmit Check Character | 56 |
| Add-On Code | 57 |
| Add-On Code Required..... | 58 |
| EAN-8 Extension..... | 58 |
| EAN-13 | 59 |
| Restore Factory Defaults | 59 |
| Enable/Disable EAN-13 | 59 |
| Transmit Check Character | 59 |
| Add-On Code | 60 |
| Add-On Code Required..... | 60 |
| EAN-13 Beginning with 290 Add-On Code Required | 61 |
| EAN-13 Beginning with 378/379 Add-On Code Required | 61 |
| EAN-13 Beginning with 414/419 Add-On Code Required | 62 |
| EAN-13 Beginning with 434/439 Add-On Code Required | 62 |
| EAN-13 Beginning with 977 Add-On Code Required | 63 |
| EAN-13 Beginning with 978 Add-On Code Required | 63 |
| EAN-13 Beginning with 979 Add-On Code Required | 64 |
| ISSN..... | 65 |
| Restore Factory Defaults | 65 |
| Enable/Disable ISSN | 65 |
| Add-On Code | 66 |

| | |
|---|----|
| Add-On Code Required..... | 66 |
| ISBN..... | 67 |
| Restore Factory Default | 67 |
| Enable/Disable ISBN | 67 |
| Set ISBN Format..... | 67 |
| Add-On Code | 68 |
| Add-On Code Required..... | 68 |
| UPC-E..... | 69 |
| Restore Factory Defaults | 69 |
| Enable/Disable UPC-E | 69 |
| Transmit Check Character | 69 |
| Add-On Code | 70 |
| Add-On Code Required..... | 70 |
| Transmit System Character "0" | 71 |
| UPC-E Extension | 71 |
| UPC-A..... | 72 |
| Restore Factory Defaults | 72 |
| Enable/Disable UPC-A..... | 72 |
| Transmit Check Character | 72 |
| Add-On Code | 73 |
| Add-On Code Required..... | 73 |
| Transmit Preamble Character | 74 |
| Interleaved 2 of 5 | 75 |
| Restore Factory Defaults | 75 |
| Enable/Disable Interleaved 2 of 5 | 75 |
| Set Length Range for Interleaved 2 of 5 | 75 |
| Check Character Verification | 76 |
| Febraban..... | 77 |
| Disable/Enable Febraban..... | 77 |
| Transmit Delay | 77 |
| ITF-14 | 79 |
| ITF-6 | 80 |
| Matrix 2 of 5 | 81 |
| Restore Factory Defaults | 81 |
| Enable/Disable Matrix 2 of 5 | 81 |
| Set Length Range for Matrix 2 of 5 | 81 |

| | |
|--|----|
| Check Character Verification | 82 |
| Industrial 2 of 5 | 83 |
| Restore Factory Defaults | 83 |
| Enable/Disable Industrial 2 of 5 | 83 |
| Set Length Range for Industrial 2 of 5 | 83 |
| Check Character Verification | 84 |
| Standard 2 of 5 (IATA 2 of 5) | 85 |
| Restore Factory Defaults | 85 |
| Enable/Disable Standard 25 | 85 |
| Set Length Range for Standard 25 | 85 |
| Check Character Verification | 86 |
| Code 39 | 87 |
| Restore Factory Defaults | 87 |
| Enable/Disable Code 39 | 87 |
| Transmit Start/Stop Character | 87 |
| Set Length Range for Code 39 | 88 |
| Check Character Verification | 88 |
| Enable/Disable Code 39 Full ASCII | 88 |
| Enable/Disable Code 32 | 89 |
| Code 32 Prefix | 89 |
| Transmit Code 32 Check Character..... | 90 |
| Transmit Code 32 Start/Stop Character | 90 |
| Codabar | 91 |
| Restore Factory Defaults | 91 |
| Enable/Disable Codabar | 91 |
| Set Length Range for Codabar | 91 |
| Check Character Verification | 92 |
| Transmit Start/Stop Character | 92 |
| Start/Stop Character Format | 93 |
| Code 93 | 94 |
| Restore Factory Defaults | 94 |
| Enable/Disable Code 93 | 94 |
| Set Length Range for Code 93 | 94 |
| Check Character Verification | 95 |
| GS1-Databar (RSS) | 96 |
| Restore Factory Defaults | 96 |

| | |
|--|-----|
| Enable/Disable GS1 Databar | 96 |
| Transmit Application Identifier "01" | 96 |
| Code 11 | 97 |
| Restore Factory Defaults | 97 |
| Enable/Disable Code 11 | 97 |
| Set Length Range for Code 11 | 97 |
| Transmit Check Character | 98 |
| Check Character Verification | 98 |
| Plessey | 99 |
| Restore Factory Defaults | 99 |
| Enable/Disable Plessey | 99 |
| Set Length Range for Plessey | 99 |
| Check Character Verification | 100 |
| MSI-Plessey | 101 |
| Restore Factory Defaults | 101 |
| Enable/Disable MSI-Plessey | 101 |
| Set Length Range for MSI-Plessey | 101 |
| Transmit Check Character | 102 |
| Check Character Verification | 102 |
| 2D Symbolologies | 103 |
| PDF 417 | 103 |
| Restore Factory Defaults | 103 |
| Enable/Disable PDF 417 | 103 |
| Set Length Range for PDF 417 | 103 |
| PDF 417 Twin Code | 104 |
| Character Encoding | 104 |
| Enable/Disable PDF417 ECI Output | 105 |
| QR Code | 106 |
| Restore Factory Defaults | 106 |
| Enable/Disable QR Code | 106 |
| Set Length Range for QR Code | 106 |
| Micro QR | 106 |
| QR Twin Code | 107 |
| Character Encoding | 107 |
| Enable/Disable QR ECI Output | 108 |
| Aztec | 109 |

| | |
|--|------------|
| Restore Factory Defaults | 109 |
| Enable/Disable Aztec Code | 109 |
| Set Length Range for Aztec Code | 110 |
| Character Encoding | 111 |
| Aztec ECI Output | 111 |
| Data Matrix..... | 112 |
| Restore Factory Defaults | 112 |
| Enable/Disable Data Matrix..... | 112 |
| Set Length Range for Data Matrix..... | 112 |
| Rectangular Barcode | 113 |
| Mirror Image..... | 113 |
| Data Matrix Twin Code..... | 114 |
| Character Encoding | 114 |
| Enable/Disable Data Matrix ECI Output..... | 115 |
| Chapter 9 Image Control..... | 116 |
| Image Flipping | 116 |
| Flip | 117 |
| Flip Vertically..... | 117 |
| Flip Horizontally | 117 |
| Chapter 10 Batch Programming..... | 118 |
| Introduction | 118 |
| Create a Batch Command | 119 |
| Create a Batch Barcode..... | 120 |
| Use Batch Barcode | 121 |
| Chapter 11 Troubleshooting..... | 122 |
| FAQ | 122 |
| Appendix..... | 124 |
| Appendix 1: Factory Defaults Table..... | 124 |
| Appendix 2: AIM ID Table | 132 |
| Appendix 3: Code ID Table..... | 134 |
| Appendix 4: Symbology ID Number | 135 |
| Appendix 5: ASCII Table..... | 136 |
| Appendix 6: Parameter Programming Examples | 140 |

| | |
|--|-----|
| a. Program the Decode Session Timeout | 140 |
| b. Program the Time Period from Idle to Sleep | 140 |
| c. Program the Image Stabilization Timeout | 140 |
| d. Program the Timeout between Decodes (Same Barcode)..... | 141 |
| e. Program the Threshold Value of Illumination Change..... | 141 |
| f. Program the Timeout between Decodes..... | 141 |
| g. Program the Decoding Area..... | 142 |
| h. Program the Custom Prefix/Suffix..... | 142 |
| i. Program the Terminating Character Suffix | 143 |
| j. Program the Code ID | 143 |
| k. Program the NGR Message | 143 |
| l. Program the Code Page..... | 144 |
| m. Program the Length Range (Maximum/Minimum Lengths) for a Symbology | 144 |
| n. Program the Custom Inter-keystroke Delay | 145 |
| o. Program the engine to get proper output for Russian encoded with Windows 1251 | 145 |
| p. Program the engine to get proper output for Russian encoded with UTF-8 | 145 |
| q. Program the Custom Transmit Delay per Character for Febraban..... | 146 |
| r. Program the Custom Transmit Delay per 12 Characters for Febraban..... | 146 |
| Appendix 7: Digit Barcodes..... | 147 |
| Appendix 8: Save/Cancel Barcodes..... | 149 |
| Appendix 9: ASCII Function Key Mapping Table | 150 |
| Appendix 10: Code Pages List..... | 152 |

Chapter 1 Getting Started

Introduction

The NLS-EM3296 V4 OEM scan engines (hereinafter referred to as “the EM3296 V4” or “the engine”), armed with the Newland patented **UIMG**[®], a computerized image recognition system, bring about a new era of 2D barcode scan engines.

The EM3296 V4s' 2D barcode decoder chip ingeniously blends **UIMG**[®] technology and advanced chip design & manufacturing, which significantly simplifies application design and delivers superior performance and solid reliability with low power consumption.

The EM3296 V4s support all mainstream 1D and standard 2D barcode symbologies (e.g., PDF417, QR Code M1/M2/Micro and Data Matrix) as well as GS1-DataBar™(RSS) (Limited/Stacked/Expanded versions). It can read barcodes on virtually any medium - paper, plastic card, mobile phones and LCD displays.

This compact, lightweight engine fits easily into even the most space-constrained equipment such as data collectors, meter readers, ticket validators and PDAs.

About This Guide

This guide provides programming instructions for the EM3296 V4. Users can configure the EM3296 V4 by scanning the programming barcodes included in this manual.

The EM3296 V4 has been properly configured for most applications and can be put into use without further configuration. Users may check the **Factory Defaults Table** in **Appendix** for reference. Throughout the manual, asterisks (**) indicate factory default values.

Connecting EVK to PC

The EVK tool is provided to assist users in application development for the EM3296 V4. You can connect the EVK to PC via a USB connection or an RS-232 connection. In case of USB connection, a driver is required if PC wants to communicate with EM3296 V4 and receive decoded data through virtual serial port.

Barcode Scanning

Powered by area-imaging technology and Newland patented **UIMG** technology, the EM3296 V4 features fast scanning and accurate decoding. Barcodes rotated at any angle can still be read with ease. When scanning a barcode, simply center the aiming beam or pattern projected by the EM3296 V4 over the barcode.

Barcode Programming

Scanning the **Enter Setup** barcode can enable the engine to enter the setup mode. Then you can scan a number of programming barcodes to configure your engine. To exit the setup mode, scan the **Exit Setup** barcode.

If the engine has exited the setup mode, only some special programming barcodes, such as the **Enter Setup** barcode and **Restore All Factory Defaults** barcode, can be read.



Enter Setup



**** Exit Setup**

Programming barcode data can be transmitted to the Host. Scan the appropriate barcode below to enable or disable the transmission of programming barcode data (i.e. the characters under programming barcode) to the Host.

Restarting the engine will automatically disable the transmission of programming barcode data to the Host.



Transmit Programming Barcode Data



**** Do Not Transmit Programming Barcode Data**

Factory Defaults

Scanning the following barcode can restore the engine to the factory defaults. See **Appendix 1: Factory Defaults Table** for more information.

Note: Use this feature with discretion.



Restore All Factory Defaults

Custom Defaults

Custom defaults make it possible to save the frequently-used settings on the engine.

Scanning the **Save as Custom Defaults** barcode can save the current settings as custom defaults. Once custom default settings are stored, they can be recovered at any time by scanning the **Restore All Custom Defaults** barcode.

Custom defaults are stored in the non-volatile memory. Restoring the engine to the factory defaults will not remove the custom defaults from the engine.



Save as Custom Defaults



Restore All Custom Defaults

Inquire Product Information

You can scan the barcode below to inquire the engine information (such as firmware version, model number, serial number, manufacture date). The result will be sent to the Host.



Inquire Product Information



0006010
Enter Setup

Chapter 2 Communication Interfaces

The EM3296 V4 provides a TTL-232 interface and a USB interface (optional) to communicate with the host device. The host device can receive scanned data and send commands to control the engine or to access/alter the configuration information of the engine via the interface.

TTL-232 Interface

Serial communication interface is usually used when connecting the engine to a host device (like PC, POS). However, to ensure smooth communication and accuracy of data, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device.

The serial communication interface provided by the engine is based on TTL-level signals. TTL-232 can be used for most application architectures. For those requiring RS-232, an external conversion circuit is needed. The conversion circuit is available only to some models.



1100000
**** Serial Communication**

Default serial communication parameters are listed below. Make sure all parameters match the host requirements.

| Parameter | Factory Default |
|-----------------------|------------------|
| Serial Communication | Standard TTL-232 |
| Baud Rate | 9600 |
| Parity Check | None |
| Data Bits | 8 |
| Stop Bits | 1 |
| Hardware Flow Control | None |



0006000
**** Exit Setup**



0006010

Enter Setup

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the Host requirements.



0100030

**** 9600**



0100000

1200



0100050

19200



0100010

2400



0100060

38400



0100020

4800



0100070

57600



0100040

14400



0100080

115200



0006000

**** Exit Setup**



0006010
Enter Setup

Parity Check

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**. The **None** option will be regarded as **Even Parity** in this case.



0101000

**** None**



0101010

Even Parity



0101020

Odd Parity

Data Bit

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**.



0103020

7 Data Bits



0103030

**** 8 Data Bits**



0006000
**** Exit Setup**



0006010
Enter Setup

Data Bit & Parity Check



0105010
7 Data Bits/Even Parity



0105020
7 Data Bits/Odd Parity



0105030
** 8 Data Bits/ No Parity



0105040
8 Data Bits/Even Parity



0105050
8 Data Bits/Odd Parity

Stop Bit



0102000
** 1 Stop Bit



0102010
2 Stop Bits



0006000
** Exit Setup



0006010
Enter Setup

USB Interface (Optional)

USB Enumeration

If the engine is connected to the Host via a USB connection, the engine will be enumerated using S/N or “00000000” after power-up. **Enumeration using S/N** enables the Host to distinguish even between engines of same model. **Enumeration using “00000000”** disables the Host from distinguishing between engines of same model.

Driver installation is required for each USB device distinguished from others by the Host in the process of enumeration.



1100210
Enumeration Using S/N



1100200
**** Enumeration Using “00000000”**

USB HID-KBW

When you connect the engine to the Host via a USB connection, you can enable the **USB HID-KBW** feature by scanning the barcode below. Then engine’s transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



1100020
USB HID-KBW



0006000
**** Exit Setup**



0006010
Enter Setup

Polling Rate

This parameter specifies the polling rate for a USB keyboard. If the Host drops characters, change the polling rate to a bigger value.



1103170

**** 1ms**



1103171

2ms



1103172

3ms




1103173

4ms



1103174

5ms

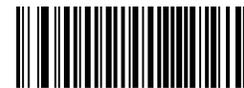

1103175

6ms



1103176

7ms



1103177

8ms



1103178

9ms



1103179

10ms



0006000
**** Exit Setup**



0006010
Enter Setup

USB Country Keyboard Types

Keyboard layouts vary from country to country. The default setting is U.S. keyboard.



1103001

**** U.S.**



1103002

Japan



1103003

Denmark



1103004

Finland



1103005

France



1103006

Turkey_F



1103007

Italy



1103008

Norway



0006000
**** Exit Setup**



0006010
Enter Setup



1103222

Spain



1103226

Turkey_Q



1103227

UK




1103209

Austria, Germany



1103202

Belgium

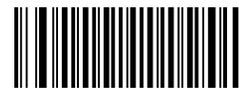

1103220

Russia



1103223

Sweden



1103218

Portugal

Note: To program the engine to get proper output for Russian encoded with Windows 1251 or UTF-8 (PDF417/QR Code/Data Matrix), see **Appendix 5**.



0006000
**** Exit Setup**



0006010
Enter Setup

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard. As a result, the engine fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

Beep on Unknown Character



1103030

**** Do Not Beep on Unknown Character**

Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes. It is programmable in 5ms increments from 0ms to 75ms. Single-digit values must have a leading zero. To learn how to program custom delay, see **Appendix 5**. The default setting is 10ms.



1103050

No Delay



1103051

Short Delay (20ms)



1103052

Long Delay (40ms)



1103053

Custom Delay



0006000
**** Exit Setup**



0006010
Enter Setup

Convert Case

Scan the appropriate barcode below to convert barcode data to your desired case.



1103040

**** No Case Conversion**



1103043

Invert Upper and Lower Case Characters



1103041

Convert All to Upper Case



1103042

Convert All to Lower Case

Example: When the **Convert All to Lower Case** feature is enabled, barcode data “AbC” is transmitted as “abc”.



0006000
**** Exit Setup**



0006010
Enter Setup

Emulate ALT+Keypad

This feature allows any ASCII character (0x00 - 0xFF) to be sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

The following options are available:

- **Disable:** No ASCII character is sent in the ALT+Keypad way.
- **Mode 1:** ASCII characters not supported by the selected keyboard type but falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 2:** ASCII characters falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 3:** All ASCII characters (0x00~0xFF) are sent in the ALT+Keypad way.

Note: In the event of a conflict between **Function Key Mapping** and **Mode 3**, **Function Key Mapping** shall govern.



1103060

**** Disable**



1103061

Mode 1



1103062

Mode 2



1103063

Mode 3

Example: Supposing US keyboard is selected, barcode data "ADF" (65/208/70) is sent as below:

(1) **Mode 1** is enabled:

"A" -- Keystroke "A"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- Keystroke "F"

(2) **Mode 3** is enabled:

"A" -- "ALT Make" + "065" + "ALT Break"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- "ALT Make" + "070" + "ALT Break"



0006000
**** Exit Setup**



0006010
Enter Setup

Function Key Mapping

When Function Key Mapping is enabled, function characters (0x00 - 0x1F) are sent as ASCII sequences over the keypad. For more information, see **Appendix 8: ASCII Function Key Mapping Table**.



Enable Function Key Mapping



**** Disable Function Key Mapping**

Example: Barcode data 0x16

| | | |
|--|------------------------------|--------|
|  T | Enable Function Key Mapping | Ctrl+V |
| | Disable Function Key Mapping | F1 |



0006000
**** Exit Setup**



0006010
Enter Setup

Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke(s) on numeric keypad, whereas sending other characters like "+", "_", "*", "/" and "." is still emulated as keystrokes on main keyboard.



1103110

**** Do Not Emulate Numeric Keypad**



1103120

Emulate Numeric Keypad

Code Page

In order to support more international characters, the **Code Page** programming feature is provided. This feature is only effective when ASCII characters are sent in the ALT+Keypad way. Programming a code page requires scanning numeric barcode (For more information, see **Appendix 9: Code Pages List**). The default code page is Windows 1252 (Latin I). To learn how to program it, see **Appendix 5**.



1103180

Set the Code Page



0006000
**** Exit Setup**



0006010
Enter Setup

USB CDC

If you connect the engine to the Host via a USB connection, the **USB CDC** feature allows the Host to receive data in the way as a serial port does. A driver is required for this feature.



1100060
USB CDC

USB HID-POS

Introduction

The USB HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than keyboard emulation.

Features:

- ✧ HID based, no custom driver required.
- ✧ Way more efficient in communication than keyboard emulation and traditional RS-232 interface.

Note: USB HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



1100080
USB HID-POS



0006000
**** Exit Setup**



0006010
Enter Setup

Access the Engine with Your Program

Use CreateFile to access the engine as a HID device and then use ReadFile to deliver the scanned data to the application program. Use WriteFile to send data to the engine.

For detailed information about USB and HID interfaces, go to www.USB.org.

Acquire Scanned Data

After scanning and decoding a barcode, the engine sends the following input report:

| | Bit | | | | | | | |
|-------|-----------------------|---|---|---|---|---|---|------------------------|
| Byte | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| 0 | Report ID = 0x02 | | | | | | | |
| 1 | Length of the barcode | | | | | | | |
| 2-57 | Decoded data (1-56) | | | | | | | |
| 58-60 | AIM ID | | | | | | | |
| 61-62 | Reserved | | | | | | | |
| 63 | - | - | - | - | - | - | - | Decoded Data Continued |

Send Data to the Engine

This output report is used to send data to the device. All programming commands can be used.

| | Bit | | | | | | | |
|------|---------------------------|---|---|---|---|---|---|---|
| Byte | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| 0 | Report ID = 0x04 | | | | | | | |
| 1 | Length of the output data | | | | | | | |
| 2-63 | Output data (1-62) | | | | | | | |



0006000
** Exit Setup



0006010
Enter Setup

VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A PID is assigned to each interface.

| Product | Interface | PID (Hex) | PID (Dec) |
|-----------|-------------|-----------|-----------|
| EM3296 V4 | USB HID-KBW | 1A03 | 6659 |
| | USB CDC | 1A06 | 6662 |
| | USB HID-POS | 1A10 | 6672 |



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 3 Scan Mode

Batch Mode

If the Batch Mode is enabled, driving the TRIG pin on the host interface connector low activates a round of multiple decode sessions. This round of multiple scans continues until the active trigger signal is no longer present. Rereading the same barcode is not allowed if it was decoded previously in the same round. For good read, the engine transmits decoded data via communication port. To activate another round of multiple scans, the Host needs to first negate the trigger, waits 20ms or longer and then drive the TRIG pin low.



0302003
Batch Mode



0006000
**** Exit Setup**



0006010

Enter Setup

Trigger Mode

If the Trigger Mode is enabled, driving the TRIG pin on the host interface connector low activates a decode session. The session continues until the barcode is decoded or decode session timeout expires or the active trigger signal is no longer present. For good read, the engine transmits decoded data via communication port. To activate another session, the Host needs to first negate the trigger, waits 20ms or longer and then drive the TRIG pin low.



0302000

**** Trigger Mode**

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 100ms to 3,600,000ms. When it is set to 0, the timeout is infinite. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000

Decode Session Timeout



0006000

**** Exit Setup**



0006010
Enter Setup

Level Trigger/Pulse Trigger

Level Trigger: Decode session is activated and continued by constant active trigger signal. The decode session ends once the barcode is decoded or decode session timeout expires.

Pulse Trigger: Decode session is activated by electric pulse of trigger signal. The decode session continues until the barcode is decoded or decode session timeout expires.



**** Level Trigger**



Pulse Trigger

Auto Sleep

Auto Sleep allows the engine in the Trigger Mode to automatically enter the sleep or low power mode if no operation or communication is performed for a time period (user programmable). When the engine is in the sleep mode, receiving trigger signal or communication from the Host can awake the engine. The engine returns to full operation within 100ms.



**** Enable Auto Sleep**



Disable Auto Sleep

The parameter below specifies how long the engine remains idle (no operation or communication occurs) before it is put into sleep mode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



Time Period from Idle to Sleep



0006000
**** Exit Setup**



0006010
Enter Setup

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

Disable Timeout between Decodes (Same Barcode): Allow the engine to re-read same barcode.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout Off: Do not allow the engine to re-read same barcode before the timeout between decodes (same barcode) expires.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout On: Do not allow the engine to re-read same barcode.



0313161

**** Disable Timeout between Decodes (Same Barcode)**



0313171

Enable Timeout between Decodes (Same Barcode)



0313200

**** Reset Timeout Off**



0313201

Reset Timeout On

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

Timeout between Decodes (Same Barcode)



0006000
**** Exit Setup**



0006010
Enter Setup

Sense Mode

If the Sense Mode is enabled, the engine activates a decode session every time it detects a change in ambient illumination. The decode session continues until the barcode is decoded or the decode session timeout expires.

Driving the TRIG pin on the host interface connector low can also activate a decode session. The decode session continues until the active trigger signal is no longer present or the barcode is decoded or the decode session timeout expires. The trigger signal needs to be negated before the engine is able to monitor ambient illumination again.



0302010
Sense Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. If the timeout expires or the barcode is decoded, the engine goes back to monitoring ambient illumination. It is programmable in 1ms increments from 100ms to 3,600,000ms. When it is set to 0, the timeout is infinite. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000
Decode Session Timeout



0006000
**** Exit Setup**



0006010

Enter Setup

Image Stabilization Timeout

This parameter defines the amount of time that the engine waits for the image to stabilize to a point that it can be decoded with more accuracy. It is programmable in 1ms increments from 0ms to 1,600ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



0313120

Image Stabilization Timeout

Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms. To learn how to program this parameter, see **Appendix 5**.



0313040

Timeout between Decodes



0006000

**** Exit Setup**



0006010
Enter Setup

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

Disable Timeout between Decodes (Same Barcode): Allow the engine to re-read same barcode.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout Off: Do not allow the engine to re-read same barcode before the timeout between decodes (same barcode) expires.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout On: Do not allow the engine to re-read same barcode.



0313020

**** Disable Timeout between Decodes (Same Barcode)**



0313030

Enable Timeout between Decodes (Same Barcode)



0313200

**** Reset Timeout Off**



0313201

Reset Timeout On

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

Timeout between Decodes (Same Barcode)



0006000
**** Exit Setup**



0006010

Enter Setup

Sensitivity

Sensitivity specifies the degree of acuteness of the engine's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the engine. You can select an appropriate degree of sensitivity that fits the ambient environment.



0312010

Medium Sensitivity



0312000

Low Sensitivity



0312020

High Sensitivity



0312030

**** Enhanced Sensitivity**

If the above four options fail to meet your needs, you may program the threshold value of illumination change.

Illumination changes that reach or surpass the predefined threshold value will cause the engine to start a decode session. The lower the threshold value, the greater the sensitivity of the engine. The default threshold value is 2.

To learn how to program this parameter, see **Appendix 5**.



0312040

Threshold Value of Illumination Change (1-16)



0006000

**** Exit Setup**



0006010
Enter Setup

Continuous Mode

This mode enables the engine to scan/capture, decode and transmit over and over again.

When the engine is operating in Continuous Mode, barcode reading can be suspended/resumed through control over the trigger signal. When barcode reading is in progress, negating the trigger signal after having maintained it for 30ms or longer will suspend barcode reading; when barcode reading is suspended, performing the same control over the trigger signal will resume barcode reading.



0302020
Continuous Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 100ms to 3,600,000ms. When it is set to 0, the timeout is infinite. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000
Decode Session Timeout

Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms. To learn how to program this parameter, see **Appendix 5**.



0313040
Timeout between Decodes



0006000
**** Exit Setup**



0006010
Enter Setup

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

Disable Timeout between Decodes (Same Barcode): Allow the engine to re-read same barcode.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout Off: Do not allow the engine to re-read same barcode before the timeout between decodes (same barcode) expires.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout On: Do not allow the engine to re-read same barcode.



0313160

**** Disable Timeout between Decodes (Same Barcode)**



0313170

Enable Timeout between Decodes (Same Barcode)



0313200

**** Reset Timeout Off**



0313201

Reset Timeout On

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

Timeout between Decodes (Same Barcode)



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 4 Scanning Preferences

Introduction

This chapter contains information as to how to adapt your engine to various applications with preference setting. For instance, to narrow the field of view of the engine to make sure it reads only those barcodes intended by the user.

Decode Area

Whole Area Decoding

When this option is enabled, the engine attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.



0322000
**** Whole Area Decoding**

Specific Area Decoding

The engine attempts to read barcode(s) within a specified decoding area and transmits the barcode that has been first decoded. This option allows the engine to narrow its field of view to make sure it reads only those barcodes intended by the user. For instance, if multiple barcodes are placed closely together, specific area decoding in conjunction with appropriate pre-defined decoding area will insure that only the desired barcode is read.



0322010
Specific Area Decoding



0006000
**** Exit Setup**




0006010
Enter Setup

Specify Decoding Area

If **Specific Area Decoding** is enabled, the engine only reads barcodes that intersect the predefined decoding area.

The default decoding area is an area of 40% top, 60% bottom, 40% left and 60% right of the engine's field of view, as shown in the figure below. In the following example, the white box is the decoding area. Since Barcode 1 passes through the decoding area, it will be read. Barcode 2 does not pass through the decoding area, so it will not be read.

You can define the decoding area using the **Top of Decoding Area**, **Bottom of Decoding Area**, **Left of Decoding Area** and **Right of Decoding Area** barcodes as well as numeric barcode(s) that represent(s) a desired percentage (0-100). To learn how to program decoding area, see **Appendix 5**.

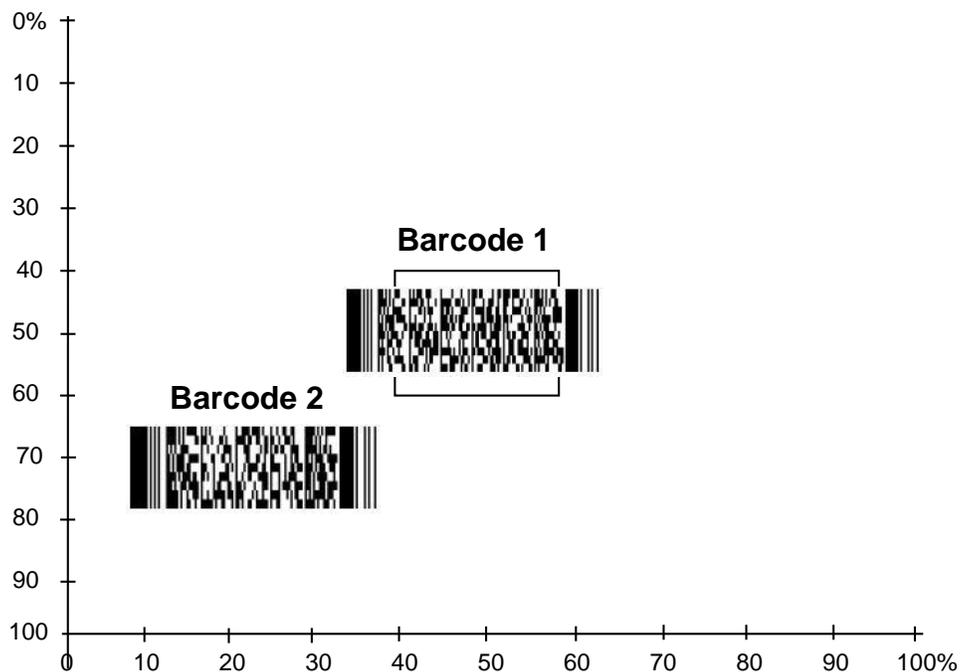

0006000
** Exit Setup



0006010
Enter Setup



0322030
Top of Decoding Area



0322040
Bottom of Decoding Area



0322050
Left of Decoding Area



0322060
Right of Decoding Area



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 5 Illumination & Aiming

Illumination

A couple of illumination options are provided to improve the lighting conditions during every image capture:

Normal: Illumination LEDs are turned on during image capture.

Always ON: Illumination LEDs keep ON after the engine is powered on.

OFF: Illumination LEDs are OFF all the time.



0200000

**** Normal**



0200020

OFF



0200010

Always ON



0006000
**** Exit Setup**



0006010
Enter Setup

Aiming

When scanning/capturing image, the engine projects an aiming pattern which allows positioning the target barcode within its field of view and thus makes decoding easier.

Normal: The engine projects an aiming pattern only during barcode scanning/capture.

Always ON: Aiming pattern is constantly ON after the engine is powered on.

OFF: Aiming pattern is OFF all the time.



0201000

**** Normal**



0201020

OFF



0201010

Always ON



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 6 Beep & LED Notifications

Startup Beep

If startup beep is enabled, the engine will beep after being turned on.



** Enable Startup Beep



Disable Startup Beep

Good Read Beep for Non-programming Barcode

The engine can provide a PWM output to an external driver circuit to drive a beeper after decoding a non-programming barcode. Scan the appropriate barcode below to enable or disable the emission of good read beep. Beep type (frequency) and volume are also user programmable.



** Good Read Beep On for Non-programming Barcode



Good Read Beep Off for Non-programming Barcode



0006000
** Exit Setup



0006010
Enter Setup

Beep Type



0203020

Type 1



0203022

**** Type 3**



0203021

Type 2

Beep Volume



0203030

**** Loud**



0203032

Low



0203031

Medium



0006000
**** Exit Setup**



0006010
Enter Setup

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard (USB HID-KBW). As a result, the engine fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

Beep on Unknown Character



1103030

**** Do Not Beep on Unknown Character**

Good Read Beep for Programming Barcode



0203041

**** Good Read Beep On for Programming Barcode**



0203040

Good Read Beep Off for Programming Barcode

Good Read LED



0206011

**** Good Read LED ON**



0206010

Good Read LED OFF



0006000
**** Exit Setup**



0006010
Enter Setup

Transmit NGR Message

Scan a barcode below to select whether or not to transmit a user-defined NGR (Not Good Read) message when a barcode is not decoded.



0320010

Transmit NGR Message



0320000

**** Do Not Transmit NGR Message**

Edit NGR Message

To edit an NGR message, scan the **Edit NGR Message** barcode and the numeric barcodes corresponding to the ASCII values (decimal) of desired characters and then scan the **Save** barcode.

An NGR message can contain 0-7 characters (ASCII value of character: 0-255).



0320020

Edit NGR Message



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 7 Prefix & Suffix

In many applications, barcode data needs to be edited and distinguished from one another.

Usually AIM ID and Code ID can be used as identifiers, but in some special cases customized prefix and terminating character suffix like Carriage Return or Line Feed can also be the alternatives.

Data formatting may include:

- ✧ Append AIM ID/Code ID/custom prefix before the decoded data
- ✧ Append custom suffix after the decoded data
- ✧ Append terminating character to the end of the data

The following formats can be used when editing barcode data:

- ✧ [Code ID] + [Custom Prefix] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]
- ✧ [Custom Prefix] + [Code ID] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]



0006000
**** Exit Setup**



0006010
Enter Setup

Global Settings

Enable/Disable All Prefix/Suffix

Disable All Prefix/Suffix: Transmit barcode data with no prefix/suffix.

Enable All Prefix/Suffix: Allow user to append Code ID prefix, AIM ID prefix, custom prefix/suffix and terminating character to the barcode data before the transmission.



0311010
Enable All Prefix/Suffix



0311000
Disable All Prefix/Suffix

Prefix Sequences



0317010
Code ID+Custom Prefix+AIM ID



0317040
** Custom Prefix+Code ID+AIM ID



0006000
** Exit Setup



0006010
Enter Setup

Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 10 characters.



0305010
Enable Custom Prefix



0305000
** Disable Custom Prefix

Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode and the numeric barcodes representing the hexadecimal values of a desired prefix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters.

To learn how to program this parameter, see **Appendix 5**.

Note: A custom prefix cannot exceed 10 characters.



0300000
Set Custom Prefix



0006000
** Exit Setup



0006010
Enter Setup

AIM ID Prefix

AIM (Automatic Identification Manufacturers) IDs and ISO/IEC 15424 standards define symbology identifiers and data carrier identifiers. (For the details, see the “**Appendix 2: AIM ID Table**” section). If AIM ID prefix is enabled, the engine will add the symbology identifier before the scanned data after decoding.



0308030
Enable AIM ID Prefix



0308000
** Disable AIM ID Prefix

Code ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one or two English letters.



0307010
Enable Code ID Prefix



0307000
** Disable Code ID Prefix

Restore All Default Code IDs

For the information of default Code IDs, see the “**Appendix 3: Code ID Table**” section.



0307020
Restore All Default Code IDs



0006000
** Exit Setup



0006010
Enter Setup

Modify Code ID

Code ID of each symbology can be programmed separately. To learn how to program this parameter, see **Appendix 5**.



Modify PDF417 Code ID



Modify Data Matrix Code ID



Modify QR Code ID



Modify Aztec Code ID



Modify Code 128 Code ID



Modify GS1-128 Code ID



Modify AIM-128 Code ID



Modify EAN-8 Code ID



0006000
**** Exit Setup**



0006010
Enter Setup



0004050
Modify EAN-13 Code ID



0004060
Modify UPC-E Code ID



0004070
Modify UPC-A Code ID



0004240
Modify ISBN Code ID



0004230
Modify ISSN Code ID



0004130
Modify Code 39 Code ID



0004170
Modify Code 93 Code ID



0004080
Modify Interleaved 2 of 5 Code ID



0004090
Modify ITF-14 Code ID



0004100
Modify ITF-6 Code ID



0006000
**** Exit Setup**



0006010

Enter Setup



0004150

Modify Codabar Code ID



0004250

Modify Industrial 25 Code ID



0004260

Modify Standard 25 Code ID



0004110

Modify Matrix 25 Code ID



0004280

Modify Code 11 Code ID



0004270

Modify Plessey Code ID



0004290

Modify MSI/Plessey Code ID



0004310

Modify GS1 Databar Code ID



0006000

**** Exit Setup**



0006010
Enter Setup

Custom Suffix

Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 10 characters.



0306010
Enable Custom Suffix



0306000
** Disable Custom Suffix

Set Custom Suffix

To set a custom suffix, scan the **Set Custom Suffix** barcode and the numeric barcodes representing the hexadecimal values of a desired suffix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters. To learn how to program this parameter, see **Appendix 5**.

Note: A custom suffix cannot exceed 10 characters.



0301000
Set Custom Suffix



0006000
** Exit Setup



0006010

Enter Setup

Terminating Character Suffix

A terminating character can be used to mark the end of data, which means nothing can be added after it.

A terminating character suffix can contain 1-2 characters.

Enable/Disable Terminating Character Suffix

To enable/disable terminating character suffix, scan the appropriate barcode below.



0309010

**** Enable Terminating Character Suffix**



0309000

Disable Terminating Character Suffix



0006000

**** Exit Setup**



0006010
Enter Setup

Set Terminating Character Suffix

The engine provides a shortcut for setting the terminating character suffix to CR (0x0D) or CRLF (0x0D,0x0A) and enabling it by scanning the appropriate barcode below.



0310010

**** Terminating Character CR (0x0D)**



0310020

Terminating Character CRLF (0x0D,0x0A)

To set a terminating character suffix, scan the **Set Terminating Character Suffix** barcode and the numeric barcodes representing the hexadecimal value of a desired terminating character and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of terminating characters. To learn how to program this parameter, see **Appendix 5**.

Note: A terminating character suffix cannot exceed 2 characters.



0310000

Set Terminating Character Suffix



0006000
**** Exit Setup**



0006010
Enter Setup

Data Packing

Introduction

Data packing is designed for a specific group of users who want to have the data packed before transmission. Data packing influences data format, so it is advised to disable this feature when it is not required.

Data Packing Options

Disable Data Packing: Transmit decoded data in raw format (unpacked).

Enable Data Packing, Format 1: Transmit decoded data with the packet format 1 defined below.

Packet format 1: [STX + ATTR + LEN] + [AL_TYPE + DATA] + [LRC]

STX: 0x02

ATTR: 0x00

LEN: Barcode data length is expressed in 2 bytes ranging from 0x0000 (0) to 0xFFFF (65535).

AL_TYPE: 0x36

DATA: Raw barcode data.

LRC: Check digit.

LRC calculation algorithm: computation sequence: $0xFF + LEN + AL_TYPE + DATA$; computation method is XOR, byte by byte.

Enable Data Packing, Format 2: Transmit decoded data with the packet format 2 defined below.

Packet format 2: [STX + ATTR + LEN] + [AL_TYPE] + [Symbology_ID + DATA] + [LRC]

STX: 0x02

ATTR: 0x00

LEN: Symbology ID and barcode data length is expressed in 2 bytes ranging from 0x0000 (0) to 0xFFFF (65535). That means $LEN = \text{Data length} + 1$.

AL_TYPE: 0x3B

Symbology_ID: The ID number of symbology, 1 byte.

DATA: Raw barcode data.

LRC: Check digit. LRC calculation algorithm: computation sequence: $0xFF + LEN + AL_TYPE + \text{Symbology_ID} + DATA$; computation method is XOR, byte by byte.



0006000
** Exit Setup



0006010
Enter Setup



0314000
**** Disable Data Packing**



0314010
Enable Data Packing, Format 1



0314070
Enable Data Packing, Format 2



0006000
**** Exit Setup**



Chapter 8 Symbologies

Global Settings

Enable/Disable All Symbologies

If the **Disable All Symbologies** feature is enabled, the engine will not be able to read any non-programming barcodes except the programming barcodes.



Enable All Symbologies



Disable All Symbologies

Enable/Disable 1D Symbologies

If the **Disable 1D Symbologies** feature is enabled, the engine will not be able to read any 1D barcodes.



Enable 1D Symbologies



Disable 1D Symbologies

Enable/Disable 2D Symbologies

If the **Disable 2D Symbologies** feature is enabled, the engine will not be able to read any 2D barcodes.



Enable 2D Symbologies



Disable 2D Symbologies





0006010
Enter Setup


Video Reverse

The **Video Reverse** feature only applies to 2D barcodes.


Regular barcode: Dark image on a bright background.

Inverse barcode: Bright image on a dark background.

The examples of regular barcode and inverse barcode are shown below.

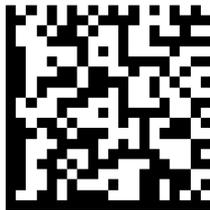

Regular Barcode

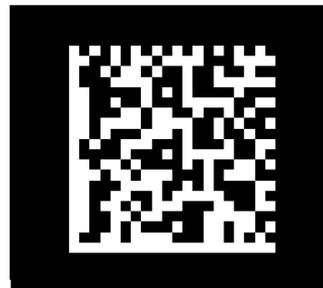

Inverse Barcode

Video Reverse allows the engine to read barcodes that are inverted.

Video Reverse ON: Read both regular barcodes and inverse barcodes.

Video Reverse OFF: Read regular barcodes only.

The engine shows a slight decrease in scanning speed when Video Reverse is ON.



Video Reverse ON



**** Video Reverse OFF**



0006000
**** Exit Setup**



1D Symbologies

Code 128

Restore Factory Defaults



Restore the Factory Defaults of Code 128

Enable/Disable Code 128



** Enable Code 128



Disable Code 128

Set Length Range for Code 128



Set the Minimum Length



Set the Maximum Length





0006010
Enter Setup

GS1-128 (UCC/EAN-128)

Restore Factory Defaults



0412000

Restore the Factory Defaults of GS1-128

Enable/Disable GS1-128



0412020

**** Enable GS1-128**



0412010

Disable GS1-128

Set Length Range for GS1-128



0412030

Set the Minimum Length



0412040

Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

AIM-128

Restore Factory Defaults



0423000

Restore the Factory Defaults of AIM-128

Enable/Disable AIM-128



0423020

**** Enable AIM-128**



0423010

Disable AIM-128

Set Length Range for AIM-128



0423030

Set the Minimum Length



0423040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

EAN-8

Restore Factory Defaults



0401000

Restore the Factory Defaults of EAN-8

Enable/Disable EAN-8



0401020

**** Enable EAN-8**



0401010

Disable EAN-8

Transmit Check Character

EAN-8 is 8 digits in length with the last one as its check character used to verify the integrity of the data.



0401040

**** Transmit EAN-8 Check Character**



0401030

Do Not Transmit EAN-8 Check Character



0006000
**** Exit Setup**



Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



Enable 2-Digit Add-On Code



**** Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.





0006010

Enter Setup

Add-On Code Required

When **EAN-8 Add-On Code Required** is selected, the engine will only read EAN-8 barcodes that contain add-on codes.



0401110

EAN-8 Add-On Code Required



0401120

**** EAN-8 Add-On Code Not Required**

EAN-8 Extension

Disable EAN-8 Zero Extend: Transmit EAN-8 barcodes as is.

Enable EAN-8 Zero Extend: Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.



0401100

Enable EAN-8 Zero Extend



0401090

**** Disable EAN-8 Zero Extend**



0006000

**** Exit Setup**



0006010

Enter Setup

EAN-13

Restore Factory Defaults



0402000

Restore the Factory Defaults of EAN-13

Enable/Disable EAN-13



0402020

** Enable EAN-13



0402010

Disable EAN-13

Transmit Check Character



0402040

** Transmit EAN-13 Check Character



0402030

Do Not Transmit EAN-13 Check Character



0006000

** Exit Setup



0006010

Enter Setup

Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0402060

Enable 2-Digit Add-On Code



0402050

**** Disable 2-Digit Add-On Code**



0402080

Enable 5-Digit Add-On Code



0402070

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.

Add-On Code Required

When **EAN-13 Add-On Code Required** is selected, the engine will only read EAN-13 barcodes that contain add-on codes.



0402090

EAN-13 Add-On Code Required



0402100

**** EAN-13 Add-On Code Not Required**



0006000

**** Exit Setup**



EAN-13 Beginning with 290 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “290”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “290” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**** Do Not Require Add-On Code**



Require Add-On Code

EAN-13 Beginning with 378/379 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “378” or “379”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with a “378” or “379” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**** Do Not Require Add-On Code**



Require Add-On Code





0006010

Enter Setup

EAN-13 Beginning with 414/419 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “414” or “419”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with a “414” or “419” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402150

** Do Not Require Add-On Code



0402160

Require Add-On Code

EAN-13 Beginning with 434/439 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “434” or “439”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with a “434” or “439” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402170

** Do Not Require Add-On Code



0402180

Require Add-On Code



0006000

** Exit Setup



EAN-13 Beginning with 977 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “977”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “977” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**** Do Not Require Add-On Code**



Require Add-On Code

EAN-13 Beginning with 978 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “978”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “978” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**** Do Not Require Add-On Code**



Require Add-On Code





0006010

Enter Setup

EAN-13 Beginning with 979 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “979”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “979” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402230

** Do Not Require Add-On Code



0402240

Require Add-On Code



0006000

** Exit Setup



ISSN

Restore Factory Defaults



Restore the Factory Defaults of ISSN

Enable/Disable ISSN



Enable ISSN



** Disable ISSN





0006010

Enter Setup

Add-On Code

An ISSN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0421030

Enable 2-Digit Add-On Code



0421040

**** Disable 2-Digit Add-On Code**



0421050

Enable 5-Digit Add-On Code



0421060

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of ISSN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes ISSN and ignores the add-on code when presented with an ISSN plus add-on barcode. It can also decode ISSN barcodes without add-on codes.

Add-On Code Required

When **ISSN Add-On Code Required** is selected, the engine will only read ISSN barcodes that contain add-on codes.



0421070

ISSN Add-On Code Required



0421080

**** ISSN Add-On Code Not Required**



0006000

**** Exit Setup**



0006010

Enter Setup

ISBN

Restore Factory Default



0416000

Restore the Factory Defaults of ISBN

Enable/Disable ISBN



0416020

**** Enable ISBN**



0416010

Disable ISBN

Set ISBN Format



0416030

**** ISBN-13**



0416040

ISBN-10



0006000

**** Exit Setup**



0006010

Enter Setup

Add-On Code

An ISBN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0416050

Enable 2-Digit Add-On Code



0416060

**** Disable 2-Digit Add-On Code**



0416070

Enable 5-Digit Add-On Code



0416080

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of ISBN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes ISBN and ignores the add-on code when presented with an ISBN plus add-on barcode. It can also decode ISBN barcodes without add-on codes.

Add-On Code Required

When **ISBN Add-On Code Required** is selected, the engine will only read ISBN barcodes that contain add-on codes.



0416090

ISBN Add-On Code Required



0416100

**** ISBN Add-On Code Not Required**



0006000

**** Exit Setup**



0006010

Enter Setup

UPC-E

Restore Factory Defaults



0403000

Restore the Factory Defaults of UPC-E

Enable/Disable UPC-E



0403020

**** Enable UPC-E**



0403010

Disable UPC-E

Transmit Check Character



0403040

**** Transmit UPC-E Check Character**



0403030

Do Not Transmit UPC-E Check Character



0006000

**** Exit Setup**



0006010

Enter Setup

Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0403060

Enable 2-Digit Add-On Code



0403050

**** Disable 2-Digit Add-On Code**



0403080

Enable 5-Digit Add-On Code



0403070

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.

Add-On Code Required

When **UPC-E Add-On Code Required** is selected, the engine will only read UPC-E barcodes that contain add-on codes.



0403130

UPC-E Add-On Code Required



0403140

**** UPC-E Add-On Code Not Required**



0006000

**** Exit Setup**



Transmit System Character "0"

The first character of UPC-E barcode is the system character "0".



**** Transmit System Character "0"**



Do Not Transmit System Character "0"

UPC-E Extension

Disable UPC-E Extend: Transmit UPC-E barcodes as is.

Enable UPC-E Extend: Extend UPC-E barcodes to make them compatible in length to UPC-A.



Enable UPC-E Extend



**** Disable UPC-E Extend**





0006010

Enter Setup

UPC-A

Restore Factory Defaults



0404000

Restore the Factory Defaults of UPC-A

Enable/Disable UPC-A



0404020

**** Enable UPC-A**



0404010

Disable UPC-A

Transmit Check Character



0404040

**** Transmit UPC-A Check Character**



0404030

Do Not Transmit UPC-A Check Character



0006000

**** Exit Setup**



Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



Enable 2-Digit Add-On Code



**** Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.

Add-On Code Required

When **UPC-A Add-On Code Required** is selected, the engine will only read UPC-A barcodes that contain add-on codes.



UPC-A Add-On Code Required



**** UPC-A Add-On Code Not Required**





0006010
Enter Setup

Transmit Preamble Character

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-A barcode. Select one of the following options for transmitting UPC-A preamble to the host device: transmit system character only or transmit system character and country code ("0" for USA).



0404100

System Character & Country Code



0404090

**** System Character**



0006000
**** Exit Setup**



0006010

Enter Setup

Interleaved 2 of 5

Restore Factory Defaults



0405000

Restore the Factory Defaults of Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5



0405020

**** Enable Interleaved 2 of 5**



0405010

Disable Interleaved 2 of 5

Set Length Range for Interleaved 2 of 5



0405030

Set the Minimum Length



0405040

Set the Maximum Length



0006000

**** Exit Setup**



0006010

Enter Setup

Check Character Verification

A check character is optional for Interleaved 2 of 5 and can be added as the last character. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Interleaved 2 of 5 barcodes as is.

Do Not Transmit Check Character After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Character After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0405050

**** Disable**



0405060

Do Not Transmit Check Character After Verification



0405070

Transmit Check Character After Verification



0006000

**** Exit Setup**



0006010

Enter Setup


Febraban

Disable/Enable Febraban



0405280

**** Disable Febraban**

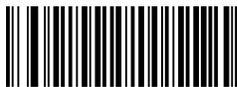

0405290

Enable Febraban, Do Not Expand



0405300

Enable Febraban, Expand

Transmit Delay

This feature is available only when USB HID-KBW is enabled. **Transmit Delay per Character** applies to both Expanded and Unexpanded Febraban while **Transmit Delay per 12 Characters** applies to Expanded Febraban only.



0700160

**** Disable Transmit Delay per Character**



0700161

Enable Transmit Delay per Character (70ms)



0700170

**** Disable Transmit Delay per 12 Characters**



0700171

Enable Transmit Delay per 12 Characters (500ms)



0006000

**** Exit Setup**



0006010

Enter Setup

Custom Transmit Delay per Character: This parameter is programmable in 5ms increments from 0ms to 75ms. To set it, scan the **Custom Transmit Delay per Character** barcode and two numeric barcodes that represent a desired value. Single-digit values must have a leading zero. See **Appendix 5** for more information.

Custom Transmit Delay per 12 Characters: To set this parameter, scan the **Custom Transmit Delay per 12 Characters** barcode and a numeric barcode (0-7, which represent 0ms, 300ms, 400ms, 500ms, 600ms, 700ms, 800ms and 900ms, respectively). See **Appendix 5** for more information.



0700162

Custom Transmit Delay per Character



0700172

Custom Transmit Delay per 12 Characters



0006000

**** Exit Setup**



ITF-14

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check character.



Restore the Factory Defaults of ITF-14



Disable ITF-14



**** Enable ITF-14 But Do Not Transmit Check Character**



Enable ITF-14 and Transmit Check Character

Note: It is advisable not to enable ITF-14 and Interleaved 2 of 5 at the same time.





0006010

Enter Setup

ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.



0405270

Restore the Factory Defaults of ITF-6



0405110

**** Disable ITF-6**



0405120

Enable ITF-6 But Do Not Transmit Check Character



0405130

Enable ITF-6 and Transmit Check Character

Note: It is advisable not to enable ITF-6 and Interleaved 2 of 5 at the same time.



0006000

**** Exit Setup**



0006010

Enter Setup

Matrix 2 of 5

Restore Factory Defaults



0406000

Restore the Factory Defaults of Matrix 2 of 5

Enable/Disable Matrix 2 of 5



0406020

Enable Matrix 2 of 5



0406010

**** Disable Matrix 2 of 5**

Set Length Range for Matrix 2 of 5



0406030

Set the Minimum Length



0406040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Character Verification



0406050

Disable



0406060

**** Do Not Transmit Check Character After Verification**



0406070

Transmit Check Character After Verification



0006000
**** Exit Setup**



0006010

Enter Setup

Industrial 2 of 5

Restore Factory Defaults



0417000

Restore the Factory Defaults of Industrial 2 of 5

Enable/Disable Industrial 2 of 5



0417020

**** Enable Industrial 2 of 5**



0417010

Disable Industrial 2 of 5

Set Length Range for Industrial 2 of 5



0417030

Set the Minimum Length



0417040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Character Verification



0417050
**** Disable**



0417070
Transmit Check Character After Verification



0417060
Do Not Transmit Check Character After Verification



0006000
**** Exit Setup**



0006010

Enter Setup

Standard 2 of 5 (IATA 2 of 5)

Restore Factory Defaults



0418000

Restore the Factory Defaults of Standard 25

Enable/Disable Standard 25



0418020

**** Enable Standard 25**



0418010

Disable Standard 25

Set Length Range for Standard 25



0418030

Set the Minimum Length



0418040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Character Verification



0418050

**** Disable**



0418070

Transmit Check Character After Verification



0418060

Do Not Transmit Check Character After Verification



0006000
**** Exit Setup**



0006010

Enter Setup

Code 39

Restore Factory Defaults



0408000

Restore the Factory Defaults of Code 39

Enable/Disable Code 39



0408020

**** Enable Code 39**



0408010

Disable Code 39

Transmit Start/Stop Character



0408090

Transmit Start/Stop Character



0408080

**** Do not Transmit Start/Stop Character**



0006000

**** Exit Setup**



0006010
Enter Setup

Set Length Range for Code 39



0408030

Set the Minimum Length



0408040

Set the Maximum Length

Check Character Verification



0408050

** Disable



0408070

Transmit Check Character After Verification



0408060

Do Not Transmit Check Character After Verification

Enable/Disable Code 39 Full ASCII

The engine can be configured to identify all ASCII characters by scanning the appropriate barcode below.



0408110

** Enable Code 39 Full ASCII



0408100

Disable Code 39 Full ASCII



0006000

** Exit Setup



Enable/Disable Code 32

Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan the appropriate bar code below to enable or disable Code 32. Code 39 must be enabled and Code 39 check character verification must be disabled for this parameter to function.



**** Disable Code 32**



Enable Code 32

Code 32 Prefix

Scan the appropriate bar code below to enable or disable adding the prefix character "A" to all Code 32 barcodes. Code 32 must be enabled for this parameter to function.



**** Disable Code 32 Prefix**



Enable Code 32 Prefix





0006010

Enter Setup

Transmit Code 32 Check Character

Code 32 must be enabled for this parameter to function.



0408180

**** Do Not Transmit Code 32 Check Character**



0408190

Transmit Code 32 Check Character

Transmit Code 32 Start/Stop Character

Code 32 must be enabled for this parameter to function.



0408160

**** Do Not Transmit Code 32 Start/Stop Character**



0408170

Transmit Code 32 Start/Stop Character



0006000

**** Exit Setup**



Codabar

Restore Factory Defaults



Restore the Factory Defaults of Codabar

Enable/Disable Codabar



** Enable Codabar



Disable Codabar

Set Length Range for Codabar



Set the Minimum Length



Set the Maximum Length





0006010
Enter Setup

Check Character Verification



0409050
**** Disable**



0409070

Transmit Check Character After Verification



0409060

Do Not Transmit Check Character After Verification

Transmit Start/Stop Character



0409090

Transmit Start/Stop Character



0409080

**** Do not Transmit Start/Stop Character**



0006000
**** Exit Setup**



Start/Stop Character Format

You can choose your desired start/stop character format by scanning the appropriate barcode below.



**** ABCD/ABCD as the Start/Stop Character**



ABCD/TN*E as the Start/Stop Character



Start/Stop Character in Uppercase



Start/Stop Character in Lowercase





0006010
Enter Setup

Code 93

Restore Factory Defaults



0410000

Restore the Factory Defaults of Code 93

Enable/Disable Code 93



0410020

**** Enable Code 93**



0410010

Disable Code 93

Set Length Range for Code 93



0410030

Set the Minimum Length



0410040

Set the Maximum Length



0006000
**** Exit Setup**



0006010
Enter Setup

Check Character Verification



0410050

Disable



0410060

**** Do Not Transmit Check Character After Verification**



0410070

Transmit Check Character After Verification



0006000

**** Exit Setup**



0006010
Enter Setup

GS1-Databar (RSS)

Restore Factory Defaults



0413000

Restore the Factory Defaults of GS1-Databar

Enable/Disable GS1 Databar



0413020

** Enable GS1-DataBar



0413010

Disable GS1-DataBar

Transmit Application Identifier "01"



0413060

** Transmit Application Identifier "01"



0413050

Do Not Transmit Application Identifier "01"



0006000
** Exit Setup



0006010

Enter Setup

Code 11

Restore Factory Defaults



0415000

Restore the Factory Defaults of Code 11

Enable/Disable Code 11



0415020

**** Enable Code 11**



0415010

Disable Code 11

Set Length Range for Code 11



0415030

Set the Minimum Length



0415040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Transmit Check Character



0415120

Transmit Check Character



0415110

** Do Not Transmit Check Character

Check Character Verification



0415050

Disable



0415060

** One Check Character, MOD11



0415070

Two Check Characters, MOD11/MOD11



0415080

Two Check Characters, MOD11/MOD9



0415090

One Check Character, MOD11 (Len<=10)
Two Check Characters, MOD11/MOD11 (Len>10)



0415100

One Check Character, MOD11 (Len<=10)
Two Check Characters, MOD11/MOD9 (Len>10)



0006000
** Exit Setup



0006010

Enter Setup

Plessey

Restore Factory Defaults



0419000

Restore the Factory Defaults of Plessey

Enable/Disable Plessey



0419020

**** Enable Plessey**



0419010

Disable Plessey

Set Length Range for Plessey



0419030

Set the Minimum Length



0419040

Set the Maximum Length



0006000

**** Exit Setup**



0006010
Enter Setup

Check Character Verification



0419050
Disable



0419060

**** Do Not Transmit Check Character After Verification**



0419070

Transmit Check Character After Verification



0006000
**** Exit Setup**



0006010

Enter Setup

MSI-Plessey

Restore Factory Defaults



0420000

Restore the Factory Defaults of MSI-Plessey

Enable/Disable MSI-Plessey



0420020

** Enable MSI-Plessey



0420010

Disable MSI-Plessey

Set Length Range for MSI-Plessey



0420030

Set the Minimum Length



0420040

Set the Maximum Length



0006000

** Exit Setup



0006010
Enter Setup

Transmit Check Character



0420100

Transmit Check Character



0420090

**** Do Not Transmit Check Character**

Check Character Verification



0420050

Disable



0420060

**** One Check Character, MOD10**



0420070

Two Check Characters, MOD10/MOD10



0420080

Two Check Characters, MOD10/MOD11



0006000
**** Exit Setup**



2D Symbologies

PDF 417

Restore Factory Defaults



Restore the Factory Defaults of PDF 417

Enable/Disable PDF 417



** Enable PDF 417



Disable PDF 417

Set Length Range for PDF 417



Set the Minimum Length



Set the Maximum Length





0006010

Enter Setup

PDF 417 Twin Code

PDF417 twin code is 2 PDF417 barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading PDF417 twin codes:

Single PDF417 Only: Read either PDF417 code.

Twin PDF417 Only: Read both PDF417 codes.

Both Single & Twin: Read both PDF417 codes. If successful, transmit as twin PDF417 only. Otherwise, try single PDF417 only.



0501070

**** Single PDF417 Only**



0501080

Twin PDF417 Only



0501090

Both Single & Twin

Character Encoding



0501350

**** Default Character Encoding**



0501351

UTF-8



0006000

**** Exit Setup**



0006010

Enter Setup

Enable/Disable PDF417 ECI Output



0501341

Disable PDF417 ECI Output



0501340

**** Enable PDF417 ECI Output**



0006000

**** Exit Setup**



0006010
Enter Setup

QR Code

Restore Factory Defaults



0502000

Restore the Factory Defaults of QR Code

Enable/Disable QR Code



0502020

** Enable QR Code



0502010

Disable QR Code

Set Length Range for QR Code



0502030

Set the Minimum Length



0502040

Set the Maximum Length

Micro QR



0502110

** Enable Micro QR



0502100

Disable Micro QR



0006000
** Exit Setup



QR Twin Code

QR twin code is 2 QR barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading QR twin codes:

Single QR Only: Read either QR code.

Twin QR Only: Read both QR codes.

Both Single & Twin: Read both QR codes. If successful, transmit as twin QR only. Otherwise, try single QR only.



**** Single QR Only**



Twin QR Only



Both Single & Twin

Character Encoding



**** Default Character Encoding**



UTF-8





0006010

Enter Setup

Enable/Disable QR ECI Output



0502151

Disable QR ECI Output



0502150

**** Enable QR ECI Output**



0006000

**** Exit Setup**



Aztec

Restore Factory Defaults



Restore the Factory Defaults of Aztec Code

Enable/Disable Aztec Code



Enable Aztec Code



** Disable Aztec Code



If the scanner fails to identify Aztec Code barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Aztec Code** barcode.





0006010

Enter Setup

Set Length Range for Aztec Code

The scanner can be configured to only decode Aztec barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0503030

Set the Minimum Length (Default: 1)



0503040

Set the Maximum Length (Default: 6144)



Minimum length is not allowed to be greater than maximum length. If you only want to read Aztec barcodes with a specific length, set both minimum and maximum lengths to be that desired length.

E
sample

Set the scanner to decode Aztec barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.
4. Scan the **Save** barcode from the “Save/Cancel Barcodes” section in Appendix.
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.
7. Scan the **Save** barcode from the “Save/Cancel Barcodes” section in Appendix.
8. Scan the **Exit Setup** barcode.



0006000

**** Exit Setup**



0006010

Enter Setup

Character Encoding



0503110

**** Default Character Encoding**



0503111

UTF-8

Aztec ECI Output



0503101

Disable Aztec ECI Output



0503100

**** Enable Aztec ECI Output**



0006000

**** Exit Setup**



0006010
Enter Setup

Data Matrix

Restore Factory Defaults



0504000
Restore the Factory Defaults of Data Matrix

Enable/Disable Data Matrix



0504020
**** Enable Data Matrix**



0504010
Disable Data Matrix

Set Length Range for Data Matrix



0504030
Set the Minimum Length



0504040
Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

Rectangular Barcode



0504110

**** Enable Rectangular Barcode**



0504100

Disable Rectangular Barcode

Mirror Image



0504331

**** Decode Mirror Images**



0504330

Do Not Decode Mirror Images



0006000

**** Exit Setup**



0006010

Enter Setup

Data Matrix Twin Code

Data Matrix twin code is 2 Data Matrix barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading Data Matrix twin codes:

Single Data Matrix Only: Read either Data Matrix code.

Twin Data Matrix Only: Read both Data Matrix codes. Transmission order: Data Matrix code on the left (in the upper position) followed by the one on the right (in the lower position).

Both Single & Twin: Read both Data Matrix codes. If successful, transmit as twin Data Matrix only. Otherwise, try single Data Matrix only.



0504070

**** Single Data Matrix Only**



0504080

Twin Data Matrix Only



0504090

Both Single & Twin

Character Encoding



0504350

**** Default Character Encoding**



0504351

UTF-8



0006000

**** Exit Setup**



0006010

Enter Setup

Enable/Disable Data Matrix ECI Output



0504341

Disable Data Matrix ECI Output



0504340

**** Enable Data Matrix ECI Output**



0006000

**** Exit Setup**



0006010

Enter Setup

Chapter 9 Image Control

Image Flipping

The user may get reversed images when the engine is installed in non-standard ways. When it happens, image flipping can be used to right the “wrong”.

The following figures illustrate standard image and three flipped images.

- ✧ Fig.9-1 Standard Image: Image the engine should get when it is installed properly and no reflector is used in its optical imaging system.
- ✧ Fig.9-2 Horizontal Flipped Image: It happens when horizontal reflection occurs along the optical path. To get standard images, enable the **Flip Horizontally** option.
- ✧ Fig.9-3 Vertical Flipped Image: It happens when vertical reflection occurs along the optical path. To get standard images, enable the **Flip Vertically** option.
- ✧ Fig.9-4 Horizontal and Vertical Flipped Image: It happens when the engine is installed upside down. To get standard images, enable the **Flip Horizontally and Vertically** option.



Fig.9-1 Standard Image



Fig.9-2 Horizontal Flipped Image



Fig.9-3 Vertical Flipped Image



Fig.9-4 Horizontal and Vertical Flipped Image



0006000

** Exit Setup



0006010

Enter Setup

Flip



0202000

**** Do Not Flip**



0202030

Flip Vertically



0202031

Flip Horizontally



0202032

Flip Horizontally and Vertically

Flip Vertically



0202033

Flip Vertically



0202034

Do Not Flip Vertically

Flip Horizontally



0202035

Flip Horizontally



0202036

Do Not Flip Horizontally



0006000

**** Exit Setup**



0006010
Enter Setup

Chapter 10 Batch Programming

Introduction

Batch programming enables users to integrate a batch of commands into a single batch barcode.

Listed below are batch programming rules:

1. Command format: Command + "=" + Parameter Value.
2. Each command is terminated by a semicolon (;). Note that there is no space between a command and its terminator semicolon.
3. Use the barcode generator software to generate a 2D batch barcode.

Example: Create a batch barcode for **Illumination Always On** (0200010), **Sense Mode** (0302010), **Decode Session Timeout** (0313000) = 2s:

1. Input the commands:

```
0200010;0302010;0313000=2000;
```

2. Generate a batch barcode.

When setting up an engine with the above configuration, scan the **Enable Batch Barcode** barcode and then the batch barcode generated.



0001110
Enable Batch Barcode



0006000
**** Exit Setup**



0006010

Enter Setup

Create a Batch Command

A batch command may contain a number of individual commands each of which is terminated by a semicolon (;).

Command Structure: Command (+ "=" + Parameter Value)

4 command syntaxes are described as below:

1. Syntax 1: Command

This syntax applies to most configuration situations.

Example:

Set the Baud Rate to 38400bps: **0100060**

Enable the Sense Mode: **0302010**

2. Syntax 2: Command + "=" + Decimal Digit(s)

This syntax applies to the options/features programming which requires the entry of parameter value (decimal), such as the Maximum/Minimum Length, Decode Session Timeout, Timeout between Decodes (Same Barcode) and Sensitivity.

Example:

Set the Decode Session Timeout to 3000ms: **0313000=3000**

Set the Sensitivity to (level) 10: **0312040=10**

3. Syntax 3: Command + "=" + Hexadecimal Digit(s) (e.g., 0x101A, 0x2C03)

This syntax applies to the features/options programming like the Custom Prefix/Suffix, Terminating Character Suffix, Code ID Suffix, which requires the entry of parameter value (hexadecimal).

Example:

Set the Terminating Character Suffix to CR/LF: **0310000=0x0D0A**

4. Syntax 4: Command + "=" + Double Quotation Marks

For situations where the parameter value is visible character in Syntax 3, this syntax is also appropriate.

Example:

Set the Custom Prefix to AUTO-ID: **0300000="AUTO-ID"**



0006000

** Exit Setup



0006010
Enter Setup

Create a Batch Barcode

Batch barcodes can be produced in the format of PDF417, QR Code or Data Matrix.

Example: Create a batch barcode for **Illumination Always On, Sense Mode, Decode Session Timeout = 2s:**

1. Input the following commands:

0200010;0302010;0313000=2000;

2. Generate a QR batch barcode.



0006000
**** Exit Setup**



Use Batch Barcode


To put a batch barcode into use, scan the following barcodes. (Use the example above.)




Enter Setup



Enable Batch Barcode

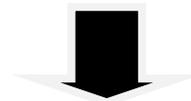

Batch Barcode

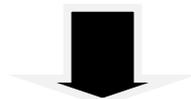

Exit Setup



Chapter 11 Troubleshooting

FAQ

Problem: Some barcodes cannot be read.

Solution:

1. Find out the barcode type and verify that the barcode type is enabled. If the barcode parameters include check character verification, select the Disable option.
2. If you do not know the barcode type, enable all symbologies.
3. If they are inverse barcodes (bright images on a dark background), enable the Video Reverse feature.

Problem: Incorrect output.

Solution:

1. If this problem happens to all barcodes and additional characters appear before/after barcode data, disable all prefix/suffix.
2. If this problem only happens to some barcodes and matches one of the following situations:
 - a) incomplete barcode data: Enable the check character verification.
 - b) both the first and last characters are asterisks (*): Disable the transmission of start/stop characters of Code 39.
 - c) "a" transmitted as "+A": Enable Code 39 Full ASCII.

Problem: Barcodes can be read, but cannot be displayed.

Solution: Verify that the serial port parameter (such as baud rate, data bit and stop bit) settings match the host requirements.

Problem: Illumination and aiming beams are OFF.

Solution:

1. Verify that the engine is properly powered up.
2. Send “?” to the engine. If the engine returns a reply of “!”, then send programming commands to turn on illumination and aimer.

Problem: Carriage Return/Line Feed settings.

Solution: See the “**Terminating Character Suffix**” section in Chapter 7.

Appendix

Appendix 1: Factory Defaults Table

| Parameter | | Factory Default | Remark | |
|--|---|------------------------|---|--|
| Programming Barcode | | | | |
| Barcode Programming | | Disabled | | |
| Programming Barcode Data | | Do not send | | |
| Communication Settings | | | | |
| Normal Mode (TTL-232 & USB supported) | | Enabled | | |
| TTL-232 | Baud Rate | 9600 | | |
| | Parity Check | None | | |
| | Data Bit | 8 | | |
| | Stop Bit | 1 | | |
| | Hardware Flow Control | No flow control | | |
| HID-KBW (optional) | Polling Rate | 1ms | | |
| | USB Country Keyboard Type | U.S. | | |
| | Convert Case | No conversion | | |
| | Inter-Keystroke Delay | 10ms | | |
| | Beep on Unknown Character | Disabled | | |
| | Emulate ALT + Keypad | Disabled | | |
| | Function Key Mapping | Disabled | | |
| | Emulate Numeric Keypad | Disabled | | |
| | Code Page | Windows 1252 (Latin I) | | |
| Scan Mode | | | | |
| Default Scan Mode | | Trigger mode | | |
| Trigger Mode | Decode Session Timeout | 3,000ms | Applicable to Trigger mode, Sense mode, Continuous mode. 100~3,600,000ms; 0: Infinite. | |
| | Trigger Condition | Electric level | | |
| | Auto Sleep | Enabled | | |
| | Time Period from Idle to Sleep | 500ms | 0~65,535ms | |
| | Timeout between Decodes (Same Barcode) | Disabled | | |
| | | 1,500ms | 0~65,535ms | |
| | Reset Timeout | Off | | |

| Parameter | | Factory Default | Remark |
|--|--|---|---|
| Sense Mode | Decode Session Timeout | 3,000ms | Applicable to Trigger mode, Sense mode, Continuous mode. 100~3,600,000ms; 0: Infinite. |
| | Image Stabilization Timeout | 500ms | 0~1,600ms |
| | Timeout between Decodes | 1000ms | Applicable to Sense mode, Continuous mode. 0~65,535ms |
| | Timeout between Decodes (Same Barcode) | Disabled | |
| | | 1,500ms | 0~65,535ms |
| | Reset Timeout | Off | |
| | Sensitivity | Enhanced Sensitivity | |
| Threshold Value of Illumination Change | 2 | 1~16 | |
| Continuous Mode | Decode Session Timeout | 3,000ms | Applicable to Trigger mode, Sense mode, Continuous mode. 100~3,600,000ms; 0: Infinite. |
| | Timeout between Decodes | 1000ms | Applicable to Sense mode, Continuous mode. 0~65,535ms |
| | Timeout between Decodes (Same Barcode) | Disabled | |
| | | 1,500ms | 0~65,535ms |
| Reset Timeout | Off | | |
| Scanning Preferences | | | |
| Decode Area | | Whole Area Decoding | |
| Specify Decoding Area | | 40% top, 60% bottom, 40% left, 60% right | |
| Illumination & Aiming | | | |
| Illumination | | Normal | |
| Aiming | | Normal | |
| Beep & LED Notifications | | | |
| Startup Beep | | Enabled | |
| Good Read Beep for Non-Programming Barcode | Notification | Enabled | |
| | Beep Type | Type 3 | |
| | Beep Volume | Loud | |
| Good Read Beep for Programming Barcode | | Enabled | |
| Good Read LED | | Enabled | |
| NGR (Not Good Read) Message | Do not transmit | | |
| | None | | |

| Parameter | Factory Default | Remark |
|------------------------------|------------------------------|--------------------------------|
| Prefix & Suffix | | |
| Prefix Sequence | Custom Prefix+Code ID+AIM ID | |
| Custom Prefix | Disabled | |
| | None | |
| AIM ID Prefix | Disabled | |
| Code ID Prefix | Disabled | |
| Custom Suffix | Disabled | |
| | None | |
| Terminating Character Suffix | Enabled | |
| | 0x0D | Carriage Return |
| Data Packing | Disable Data Packing | |
| Image Control | | |
| Image Flipping | Do not flip | |
| Symbologies | | |
| Video Reverse | Disabled | Applicable to all symbologies. |
| Code 128 | | |
| Code 128 | Enabled | |
| Maximum Length | 127 | |
| Minimum Length | 1 | |
| GS1-128 (UCC/EAN-128) | | |
| GS1-128 | Enabled | |
| Maximum Length | 127 | |
| Minimum Length | 1 | |
| AIM-128 | | |
| AIM-128 | Enabled | |
| Maximum Length | 127 | |
| Minimum Length | 1 | |
| EAN-8 | | |
| EAN-8 | Enabled | |
| Check Character | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Add-On Code | Not required | |

| Parameter | Factory Default | Remark |
|--|----------------------------|--------|
| Extend to EAN-13 | Disabled | |
| <i>EAN-13</i> | | |
| EAN-13 | Enabled | |
| Check Character | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Add-On Code | Not required | |
| EAN-13 Beginning with 290 Add-On Code Required | Do Not Require Add-On Code | |
| EAN-13 Beginning with 378/379 Add-On Code Required | Do Not Require Add-On Code | |
| EAN-13 Beginning with 414/419 Add-On Code Required | Do Not Require Add-On Code | |
| EAN-13 Beginning with 434/439 Add-On Code Required | Do Not Require Add-On Code | |
| EAN-13 Beginning with 977 Add-On Code Required | Do Not Require Add-On Code | |
| EAN-13 Beginning with 978 Add-On Code Required | Do Not Require Add-On Code | |
| EAN-13 Beginning with 979 Add-On Code Required | Do Not Require Add-On Code | |
| <i>ISSN</i> | | |
| ISSN | Disabled | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Add-On Code | Not required | |
| <i>ISBN</i> | | |
| ISBN | Enabled | |
| ISBN Format | ISBN-13 | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Add-On Code | Not required | |
| <i>UPC-E</i> | | |
| UPC-E | Enabled | |

| Parameter | Factory Default | Remark |
|----------------------------------|-----------------|--------|
| Check Character | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Add-On Code | Not required | |
| Extend to UPC-A | Disabled | |
| System Character "0" | Transmit | |
| UPC-A | | |
| UPC-A | Enabled | |
| Check Character | Transmit | |
| 2-Digit Add-On Code | Disabled | |
| 5-Digit Add-On Code | Disabled | |
| Add-On Code | Not required | |
| System Character | Transmit | |
| Country Code | Do not transmit | |
| Interleaved 2 of 5 | | |
| Interleaved 2 of 5 | Enabled | |
| Check Character Verification | Disabled | |
| Check Character | Do not transmit | |
| Maximum Length | 100 | |
| Minimum Length | 6 | |
| Febraban | | |
| Febraban | Disabled | |
| Transmit Delay per Character | Disabled | |
| Transmit Delay per 12 Characters | Disabled | |
| ITF-6 | | |
| ITF-6 | Disabled | |
| Check Character | Do not transmit | |
| ITF-14 | | |
| ITF-14 | Enabled | |
| Check Character | Do not transmit | |
| Matrix 2 of 5 | | |
| Matrix 2 of 5 | Disabled | |
| Check Character Verification | Enabled | |
| Check Character | Do not transmit | |

| Parameter | Factory Default | Remark |
|------------------------------|-----------------|--------|
| Maximum Length | 127 | |
| Minimum Length | 6 | |
| Industrial 2 of 5 | | |
| Industrial 2 of 5 | Enabled | |
| Check Character Verification | Disabled | |
| Check Character | Do not transmit | |
| Maximum Length | 127 | |
| Minimum Length | 6 | |
| Standard 2 of 5 | | |
| Standard 2 of 5 | Enabled | |
| Check Character Verification | Disabled | |
| Check Character | Do not transmit | |
| Maximum Length | 127 | |
| Minimum Length | 6 | |
| Code 39 | | |
| Code 39 | Enabled | |
| Check Character Verification | Disabled | |
| Check Character | Do not transmit | |
| Start/Stop Character | Do not transmit | |
| Code 39 Full ASCII | Enabled | |
| Code 32 | Disabled | |
| Code 32 Prefix | Disabled | |
| Code 32 Check Character | Do not transmit | |
| Code 32 Start/Stop Character | Do not transmit | |
| Maximum Length | 127 | |
| Minimum Length | 2 | |
| Codabar | | |
| Codabar | Enabled | |
| Check Character Verification | Disabled | |
| Check Character | Do not transmit | |
| Start/Stop Character | Do not transmit | |
| Start/Stop Character Format | ABCD/ABCD | |
| Maximum Length | 127 | |

| Parameter | Factory Default | Remark |
|------------------------------|----------------------|--------|
| Minimum Length | 2 | |
| Code 93 | | |
| Code 93 | Enabled | |
| Check Character Verification | Enabled | |
| Check Character | Do not transmit | |
| Maximum Length | 127 | |
| Minimum Length | 3 | |
| GS1 Databar | | |
| GS1 Databar | Enabled | |
| Application Identifier "01" | Transmit | |
| Code 11 | | |
| Code 11 | Enabled | |
| Check Character Verification | One Check | |
| Check Character | Do not transmit | |
| Maximum Length | 127 | |
| Minimum Length | 2 | |
| Plessey | | |
| Plessey | Enabled | |
| Check Character Verification | Enabled | |
| Check Character | Do not transmit | |
| Maximum Length | 127 | |
| Minimum Length | 1 | |
| MSI-Plessey | | |
| MSI-Plessey | Enabled | |
| Check Character Verification | One Check Character, | |
| Check Character | Do not transmit | |
| Maximum Length | 127 | |
| Minimum Length | 2 | |
| PDF 417 | | |
| PDF 417 | Enabled | |
| Maximum Length | 2710 | |
| Minimum Length | 1 | |
| PDF 417 Twin Code | Read single PDF417 | |

| Parameter | Factory Default | Remark |
|------------------------|----------------------------|--------|
| Character Encoding | Default Character Encoding | |
| PDF417 ECI Output | Enabled | |
| QR Code | | |
| QR Code | Enabled | |
| Micro QR | Enabled | |
| Maximum Length | 6144 | |
| Minimum Length | 1 | |
| QR Twin Code | Read single QR only | |
| Character Encoding | Default Character Encoding | |
| QR ECI Output | Enabled | |
| Aztec | | |
| Aztec Code | Disabled | |
| Maximum Length | 6144 | |
| Minimum Length | 1 | |
| Character Encoding | Default Character Encoding | |
| Aztec ECI Output | Enabled | |
| Data Matrix | | |
| Data Matrix | Enabled | |
| Rectangular Barcode | Enabled | |
| Mirror Image | Decode | |
| Maximum Length | 3116 | |
| Minimum Length | 1 | |
| DM Twin Code | Read single DM only | |
| Character Encoding | Default Character Encoding | |
| Data Matrix ECI Output | Enabled | |

Appendix 2: AIM ID Table

| Symbology | AIM ID | Remark |
|-----------------------|--------|---|
| EAN-13 | JE0 | Standard EAN-13 |
| | JE3 | EAN-13 + 2/5-Digit Add-On Code |
| EAN-8 | JE4 | Standard EAN-8 |
| | JE4 | EAN-8 + 2-Digit Add-On Code |
| | JE4 | EAN-8 + 5-Digit Add-On Code |
| UPC-E | JE0 | Standard UPC-E |
| | JE3 | UPC-E + 2/5-Digit Add-On Code |
| UPC-A | JE0 | Standard UPC-A |
| | JE3 | UPC-A + 2/5-Digit Add-On Code |
| Code 128 | JC0 | Standard Code 128 |
| GS1-128 (UCC/EAN-128) | JC1 | FNC1 is the character right after the start character |
| AIM-128 | JC2 | FNC1 is the 2nd character after the start character |
| ISBT-128 | JC4 | |
| Interleaved 2 of 5 | JI0 | No check character verification |
| | JI1 | Transmit check character after verification |
| | JI3 | Do not transmit check character after verification |
| ITF-6 | JI1 | Transmit check character |
| | JI3 | Do not transmit check character |
| ITF-14 | JI1 | Transmit check character |
| | JI3 | Do not transmit check character |
| Industrial 2 of 5 | JS0 | Not specified |
| Standard 2 of 5 | JR0 | No check character verification |
| | JR8 | MOD10; do not transmit check character |
| | JR9 | MOD10; transmit check character |
| Code 39 Code 32 | JA0 | Transmit barcodes as is; Full ASCII disabled; no check character verification |
| | JA1 | MOD43; transmit check character |
| | JA3 | MOD43; do not transmit check character |
| | JA4 | Full ASCII enabled; no check character verification |
| | JA5 | Full ASCII enabled; transmit check character |
| | JA7 | Full ASCII enabled; do not transmit check character |
| Codabar | JF0 | Standard Codabar |
| | JF2 | Transmit check character after verification |
| | JF4 | Do not transmit check character after verification |

| Symbology | AIM ID | Remark |
|-------------------|--------|---|
| Code 93 |]G0 | Standard Code 93 |
| Code 11 |]H0 | MOD11; transmit check character |
| |]H1 | MOD11/MOD11; transmit check character |
| |]H3 | Do not transmit check character after verification |
| |]H9 | No check character verification |
| GS1-DataBar (RSS) |]e0 | Standard GS1-DataBar |
| Plessey |]P0 | Standard Plessey |
| MSI-Plessey |]M0 | MOD10; transmit check character |
| |]M1 | MOD10; do not transmit check character |
| |]M7 | MOD10/ MOD11; do not transmit check character |
| |]M8 | MOD10/ MOD11; transmit check character |
| |]M9 | No check character verification |
| Matrix 2 of 5 |]X0 | Specified by the manufacturer |
| |]X1 | No check character verification |
| |]X2 | MOD10; transmit check character |
| |]X3 | MOD11; do not transmit check character |
| ISBN |]X4 | Standard ISBN |
| ISSN |]X5 | Standard ISSN |
| PDF417 |]L0 | Comply with 1994 PDF417 specifications |
| Data Matrix |]d0 | ECC000 - ECC140 |
| |]d1 | ECC200 |
| |]d2 | ECC200, FNC1 is the 1st or 5th character after the start character |
| |]d3 | ECC200, FNC1 is the 2nd or 6th character after the start character |
| |]d4 | ECC200, ECI included |
| |]d5 | ECC200, FNC1 is the 1st or 5th character after the start character,ECI included |
| |]d6 | ECC200, FNC1 is the 2nd or 6th character after the start character,ECI included |
| QR Code |]Q0 | QR1 |
| |]Q1 | 2005 version, ECI excluded |
| |]Q2 | 2005 version, ECI included |
| |]Q3 | QR Code 2005, ECI excluded, FNC1 is the 1st character after the start character |
| |]Q4 | QR Code 2005, ECI included, FNC1 is the 1st character after the start character |
| |]Q5 | QR Code 2005,ECI excluded,FNC1 is the 2nd character after the start character |
| |]Q6 | QR Code 2005, ECI included, FNC1 is the 2nd character after the start character |
| Aztec |]z0 | |

Reference: ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers).

Appendix 3: Code ID Table

| Symbology | Code ID |
|------------------------------|---------|
| Code 128 | j |
| GS1-128(UCC/EAN-128) | j |
| AIM-128 | f |
| EAN-8 | d |
| EAN-13 | d |
| ISSN | n |
| ISBN | B |
| UPC-E | c |
| UPC-A | c |
| Interleaved 2 of 5, Febraban | e |
| ITF-6 | e |
| ITF-14 | e |
| Matrix 2 of 5 | v |
| Industrial 2 of 5 | D |
| Standard 2 of 5 | s |
| Code 39, Code 32 | b |
| Codabar | a |
| Code 93 | i |
| Code 11 | H |
| Plessey | p |
| MSI-Plessey | m |
| GS1 Databar | R |
| PDF417 | r |
| QR Code | Q |
| Aztec | z |
| Data Matrix | u |

Appendix 4: Symbology ID Number

| Symbology | ID Number |
|-----------------------|-----------|
| Code 128 | 002 |
| GS1-128 (UCC/EAN-128) | 003 |
| EAN-8 | 004 |
| EAN-13 | 005 |
| UPC-E | 006 |
| UPC-A | 007 |
| Interleaved 2 of 5 | 008 |
| ITF-14 | 009 |
| ITF-6 | 010 |
| Matrix 2 of 5 | 011 |
| Code 39 | 013 |
| Codabar | 015 |
| Code 93 | 017 |
| AIM 128 | 020 |
| ISSN | 023 |
| ISBN | 024 |
| Industrial 25 | 025 |
| Standard 25 | 026 |
| Plessey | 027 |
| Code 11 | 028 |
| MSI-Plessey | 029 |
| GS1 Databar (RSS) | 031 |
| PDF417 | 032 |
| QR Code | 033 |
| Aztec | 034 |
| Data Matrix | 035 |

Appendix 5: ASCII Table

| Hex | Dec | Char |
|-----|-----|-------------------------------|
| 00 | 0 | NUL (Null char.) |
| 01 | 1 | SOH (Start of Header) |
| 02 | 2 | STX (Start of Text) |
| 03 | 3 | ETX (End of Text) |
| 04 | 4 | EOT (End of Transmission) |
| 05 | 5 | ENQ (Enquiry) |
| 06 | 6 | ACK (Acknowledgment) |
| 07 | 7 | BEL (Bell) |
| 08 | 8 | BS (Backspace) |
| 09 | 9 | HT (Horizontal Tab) |
| 0a | 10 | LF (Line Feed) |
| 0b | 11 | VT (Vertical Tab) |
| 0c | 12 | FF (Form Feed) |
| 0d | 13 | CR (Carriage Return) |
| 0e | 14 | SO (Shift Out) |
| 0f | 15 | SI (Shift In) |
| 10 | 16 | DLE (Data Link Escape) |
| 11 | 17 | DC1 (XON) (Device Control 1) |
| 12 | 18 | DC2 (Device Control 2) |
| 13 | 19 | DC3 (XOFF) (Device Control 3) |
| 14 | 20 | DC4 (Device Control 4) |
| 15 | 21 | NAK (Negative Acknowledgment) |
| 16 | 22 | SYN (Synchronous Idle) |
| 17 | 23 | ETB (End of Trans. Block) |
| 18 | 24 | CAN (Cancel) |
| 19 | 25 | EM (End of Medium) |
| 1a | 26 | SUB (Substitute) |
| 1b | 27 | ESC (Escape) |
| 1c | 28 | FS (File Separator) |
| 1d | 29 | GS (Group Separator) |

| Hex | Dec | Char |
|-----|-----|---------------------------------|
| 1e | 30 | RS (Request to Send) |
| 1f | 31 | US (Unit Separator) |
| 20 | 32 | SP (Space) |
| 21 | 33 | ! (Exclamation Mark) |
| 22 | 34 | " (Double Quote) |
| 23 | 35 | # (Number Sign) |
| 24 | 36 | \$ (Dollar Sign) |
| 25 | 37 | % (Percent) |
| 26 | 38 | & (Ampersand) |
| 27 | 39 | ` (Single Quote) |
| 28 | 40 | ((Left / Opening Parenthesis) |
| 29 | 41 |) (Right / Closing Parenthesis) |
| 2a | 42 | * (Asterisk) |
| 2b | 43 | + (Plus) |
| 2c | 44 | , (Comma) |
| 2d | 45 | - (Minus / Dash) |
| 2e | 46 | . (Dot) |
| 2f | 47 | / (Forward Slash) |
| 30 | 48 | 0 |
| 31 | 49 | 1 |
| 32 | 50 | 2 |
| 33 | 51 | 3 |
| 34 | 52 | 4 |
| 35 | 53 | 5 |
| 36 | 54 | 6 |
| 37 | 55 | 7 |
| 38 | 56 | 8 |
| 39 | 57 | 9 |
| 3a | 58 | : (Colon) |
| 3b | 59 | ; (Semi-colon) |
| 3c | 60 | < (Less Than) |
| 3d | 61 | = (Equal Sign) |

| Hex | Dec | Char |
|-----|-----|-----------------------------|
| 3e | 62 | > (Greater Than) |
| 3f | 63 | ? (Question Mark) |
| 40 | 64 | @ (AT Symbol) |
| 41 | 65 | A |
| 42 | 66 | B |
| 43 | 67 | C |
| 44 | 68 | D |
| 45 | 69 | E |
| 46 | 70 | F |
| 47 | 71 | G |
| 48 | 72 | H |
| 49 | 73 | I |
| 4a | 74 | J |
| 4b | 75 | K |
| 4c | 76 | L |
| 4d | 77 | M |
| 4e | 78 | N |
| 4f | 79 | O |
| 50 | 80 | P |
| 51 | 81 | Q |
| 52 | 82 | R |
| 53 | 83 | S |
| 54 | 84 | T |
| 55 | 85 | U |
| 56 | 86 | V |
| 57 | 87 | W |
| 58 | 88 | X |
| 59 | 89 | Y |
| 5a | 90 | Z |
| 5b | 91 | [(Left / Opening Bracket) |
| 5c | 92 | \ (Back Slash) |
| 5d | 93 |] (Right / Closing Bracket) |

| Hex | Dec | Char |
|-----|-----|-------------------------|
| 5e | 94 | ^ (Caret / Circumflex) |
| 5f | 95 | _ (Underscore) |
| 60 | 96 | ' (Grave Accent) |
| 61 | 97 | a |
| 62 | 98 | b |
| 63 | 99 | c |
| 64 | 100 | d |
| 65 | 101 | e |
| 66 | 102 | f |
| 67 | 103 | g |
| 68 | 104 | h |
| 69 | 105 | i |
| 6a | 106 | j |
| 6b | 107 | k |
| 6c | 108 | l |
| 6d | 109 | m |
| 6e | 110 | n |
| 6f | 111 | o |
| 70 | 112 | p |
| 71 | 113 | q |
| 72 | 114 | r |
| 73 | 115 | s |
| 74 | 116 | t |
| 75 | 117 | u |
| 76 | 118 | v |
| 77 | 119 | w |
| 78 | 120 | x |
| 79 | 121 | y |
| 7a | 122 | z |
| 7b | 123 | { (Left/ Opening Brace) |
| 7c | 124 | (Vertical Bar) |
| 7d | 125 | } (Right/Closing Brace) |
| 7e | 126 | ~ (Tilde) |
| 7f | 127 | DEL (Delete) |

Appendix 6: Parameter Programming Examples

The following examples show you how to program parameters by scanning programming barcodes.

a. Program the Decode Session Timeout

Example: Set the decode session timeout to 1500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode. (See the “**Decode Session Timeout**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

b. Program the Time Period from Idle to Sleep

Example: Set the time period from idle to sleep to 500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Time Period from Idle to Sleep** barcode. (See the “**Auto Sleep**” section in Chapter 3)
3. Scan the numeric barcodes “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

c. Program the Image Stabilization Timeout

Example: Set the image stabilization timeout to 500ms

1. Scan the **Enter Setup** barcode.
 2. Scan the **Image Stabilization Timeout** barcode. (See the “**Image Stabilization Timeout**” section in Chapter 3)
 3. Scan the numeric barcodes “5”, “0” and “0”.
 4. Scan the **Save** barcode.
 5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

d. Program the Timeout between Decodes (Same Barcode)

Example: Set the timeout between decodes (same barcode) to 1000ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode. (See the “**Timeout between Decodes (Same Barcode)**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “0”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

e. Program the Threshold Value of Illumination Change

Example: Set the threshold value of illumination change to 4

1. Scan the **Enter Setup** barcode.
2. Scan the **Threshold Value of Illumination Change** barcode. (See the “**Sensitivity**” section in Chapter 3)
3. Scan the numeric barcode “4”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

f. Program the Timeout between Decodes

Example: Set the timeout between decodes to 500ms

1. Scan the **Enter Setup** barcode.
 2. Scan the **Timeout between Decodes** barcode. (See the “**Timeout between Decodes**” section in Chapter 3)
 3. Scan the numeric barcodes “5”, “0” and “0”.
 4. Scan the **Save** barcode.
 5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

g. Program the Decoding Area

Example: Set the decoding area to 20% top, 80% bottom, 20% left and 80% right.

1. Scan the **Enter Setup** barcode.
2. Scan the **Specific Area Decoding** barcode. (See the “**Specific Area Decoding**” section in Chapter 4)
3. Scan the **Top of Decoding Area** barcode. (See the “**Specify Decoding Area**” section in Chapter 4)
4. Scan the numeric barcodes “2” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Bottom of Decoding Area** barcode.
7. Scan the numeric barcodes “8” and “0”.
8. Scan the **Save** barcode.
9. Scan the **Left of Decoding Area** barcode.
10. Scan the numeric barcodes “2” and “0”.
11. Scan the **Save** barcode.
12. Scan the **Right of Decoding Area** barcode.
13. Scan the numeric barcodes “8” and “0”.
14. Scan the **Save** barcode.
15. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

h. Program the Custom Prefix/Suffix

Example: Set the custom prefix to “CODE”

1. Check the hex values of “CODE” in the ASCII Table. (“CODE”: 43, 4F, 44, 45)
 2. Scan the **Enter Setup** barcode.
 3. Scan the **Set Custom Prefix** barcode. (See the “**Set Custom Prefix**” section in Chapter 6)
 4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”.
 5. Scan the **Save** barcode.
 6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

i. Program the Terminating Character Suffix

Example: Set the terminating character suffix to 0x0D

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode. (See the “**Set Terminating Character Suffix**” section in Chapter 6)
3. Scan the numeric barcodes “0” and “D”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

j. Program the Code ID

Example: Set the Code ID of PDF 417 to “p”

1. Check the hex value of “p” in the ASCII Table. (“p”: 70)
2. Scan the **Enter Setup** barcode.
3. Scan the **Modify PDF417 Code ID** barcode. (See the “**Modify Code ID**” section in Chapter 6)
4. Scan the numeric barcodes “7” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

k. Program the NGR Message

Example: Set the NGR message to “!ERR”

1. Check the hex values of “!ERR” in the ASCII Table. (“!ERR”: 21, 45, 52, 52)
2. Scan the **Enter Setup** barcode.
3. Scan the **Edit NGR Message** barcode. (See the “**Edit NGR Message**” section in Chapter 5)
4. Scan the numeric barcodes “2”, “1”, “4”, “5”, “5”, “2”, “5” and “2”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

I. Program the Code Page

Example: Set the code page to Windows 1251 (Cyrillic)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode. (See the “**Code Page**” section in Chapter 2)
3. Scan the numeric barcode “1”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

m. Program the Length Range (Maximum/Minimum Lengths) for a Symbology

Note: If minimum length is set to be greater than maximum length, the engine only decodes barcodes with either the minimum or maximum length. If you only want to read barcodes with a specific length, set both minimum and maximum lengths to be that desired length.

Example: Set the engine to decode Code 128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
 2. Scan the **Set the Minimum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
 3. Scan the numeric barcode “8”.
 4. Scan the **Save** barcode.
 5. Scan the **Set the Maximum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
 6. Scan the numeric barcodes “1” and “2”.
 7. Scan the **Save** barcode.
 8. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

n. Program the Custom Inter-keystroke Delay

Example: Set the inter-keystroke delay to 5ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Delay** barcode. (See the “**Inter-Keystroke Delay**” section in Chapter 2)
3. Scan the numeric barcodes “0” and “5”.
4. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

o. Program the engine to get proper output for Russian encoded with Windows 1251

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 2.
3. Scan the numeric barcode “1” from Appendix 6.
4. Scan the **Save** barcode from Appendix 7.
5. Scan the appropriate **Default Character Encoding** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 8.
6. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 2.
7. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

p. Program the engine to get proper output for Russian encoded with UTF-8

1. Scan the **Enter Setup** barcode.
 2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 2.
 3. Scan the numeric barcode “1” from Appendix 6.
 4. Scan the **Save** barcode from Appendix 7.
 5. Scan the appropriate **UTF-8** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 8.
 6. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 2.
 7. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

q. Program the Custom Transmit Delay per Character for Febraban

Example: Set the transmit delay per character to 5ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Transmit Delay per Character** barcode. (See the “**Transmit Delay**” section in Chapter 8)
3. Scan the numeric barcodes “0” and “5”.
4. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

r. Program the Custom Transmit Delay per 12 Characters for Febraban

Example: Set the transmit delay per 12 characters to 600ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Transmit Delay per 12 Characters** barcode. (See the “**Transmit Delay**” section in Chapter 8)
3. Scan the numeric barcodes “4”.
4. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

Appendix 7: Digit Barcodes

0-9



000000

0



000050

5



000010

1



000060

6



000020

2



000070

7



000030

3



000080

8



000040

4



000090

9

A-F



A



B



C



D



E



F

Appendix 8: Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel** barcode and then start the configuration all over again, or scan the **Delete the Last Digit** barcode and then the correct digit, or scan the **Delete All Digits** barcode and then the digits you want.

For instance, after reading the **Maximum Length** barcode and numeric barcodes “1”, “2” and “3”, you scan:

- ✧ **Delete the Last Digit:** The last digit “3” will be removed.
- ✧ **Delete All Digits:** All digits “123” will be removed.
- ✧ **Cancel:** The maximum length configuration will be cancelled. And the engine is still in the setup mode.



Save



Delete the Last Digit



Delete All Digits



Cancel

Appendix 9: ASCII Function Key Mapping Table

| ASCII Function | ASCII Value (HEX) | No Function Key Mapping | Function Key Mapping |
|-------------------------------|-------------------|-------------------------|-------------------------|
| NUL (Null char.) | 00 | Null | Ctrl+2 |
| SOH (Start of Header) | 01 | Keypad Enter | Ctrl+A |
| STX (Start of Text) | 02 | Caps Lock | Ctrl+B |
| ETX (End of Text) | 03 | Null | Ctrl+C |
| EOT (End of Transmission) | 04 | Null | Ctrl+D |
| ENQ (Enquiry) | 05 | Null | Ctrl+E |
| ACK (Acknowledgment) | 06 | Null | Ctrl+F |
| BEL (Bell) | 07 | Enter | Ctrl+G |
| BS (Backspace) | 08 | Left Arrow | Ctrl+H |
| HT (Horizontal Tab) | 09 | Horizontal Tab | Ctrl+I |
| LF (Line Feed) | 0A | Down Arrow | Ctrl+J |
| VT (Vertical Tab) | 0B | Vertical Tab | Ctrl+K |
| FF (Form Feed) | 0C | Delete | Ctrl+L |
| CR (Carriage Return) | 0D | Enter | Ctrl+M |
| SO (Shift Out) | 0E | Insert | Ctrl+N |
| SI (Shift In) | 0F | Esc | Ctrl+O |
| DLE (Data Link Escape) | 10 | F11 | Ctrl+P |
| DC1 (XON) (Device Control 1) | 11 | Home | Ctrl+Q |
| DC2 (Device Control 2) | 12 | Print Screen | Ctrl+R |
| DC3 (XOFF) (Device Control 3) | 13 | Backspace | Ctrl+S |
| DC4 (Device Control 4) | 14 | tab+shift | Ctrl+T |
| NAK (Negative Acknowledgment) | 15 | F12 | Ctrl+U |
| SYN (Synchronous Idle) | 16 | F1 | Ctrl+V |
| ETB (End of Trans. Block) | 17 | F2 | Ctrl+W |
| CAN (Cancel) | 18 | F3 | Ctrl+X |
| EM (End of Medium) | 19 | F4 | Ctrl+Y |
| SUB (Substitute) | 1A | F5 | Ctrl+Z |
| ESC (Escape) | 1B | F6 | See the following table |
| FS (File Separator) | 1C | F7 | |
| GS (Group Separator) | 1D | F8 | |
| RS (Request to Send) | 1E | F9 | |
| US (Unit Separator) | 1F | F10 | |

ASCII Function Key Mapping Table (Continued)

The function key mappings of the last five characters in the previous table differ from one keyboard layout to another.

| Country/ Keyboard Layout | Function Key Mapping | | | | |
|-----------------------------|----------------------|--------|---------|--------|--------|
| | 1B | 1C | 1D | 1E | 1F |
| United States | Ctrl+[| Ctrl+\ | Ctrl+] | Ctrl+6 | Ctrl+- |
| Belgium | Ctrl+[| Ctrl+< | Ctrl+] | Ctrl+6 | Ctrl+- |
| Scandinavia | Ctrl+8 | Ctrl+< | Ctrl+9 | Ctrl+6 | Ctrl+- |
| France | Ctrl+^ | Ctrl+8 | Ctrl+\$ | Ctrl+6 | Ctrl+= |
| Germany | | Ctrl+Ã | Ctrl++ | Ctrl+6 | Ctrl+- |
| Italy | | Ctrl+\ | Ctrl++ | Ctrl+6 | Ctrl+- |
| Switzerland | | Ctrl+< | Ctrl+. | Ctrl+6 | Ctrl+- |
| United Kingdom | Ctrl+[| Ctrl+Ø | Ctrl+] | Ctrl+6 | Ctrl+- |
| Denmark | Ctrl+8 | Ctrl+\ | Ctrl+9 | Ctrl+6 | Ctrl+- |
| Norway | Ctrl+8 | Ctrl+\ | Ctrl+9 | Ctrl+6 | Ctrl+- |
| Spain | Ctrl+[| Ctrl+\ | Ctrl+] | Ctrl+6 | Ctrl+- |

Appendix 10: Code Pages List

| Numeric Barcode Needed | Code Page |
|------------------------|-------------------------|
| 0 | Windows 1252 (Latin I) |
| 1 | Windows 1251 (Cyrillic) |

Newland Auto-ID Tech. Co., Ltd. (Headquarter)

Add: No.1, Rujiang West Rd., Mawei, Fuzhou, Fujian 350001, China
Tel: +86 (0) 591 8397 9500
Fax: +86 (0) 591 8397 9216
E-mail: info@nlscan.com
Web: www.newlandaidc.com

Newland APAC

Newland Taiwan Inc.

Add: 7F-6, No. 268, Liancheng Rd., Zhonghe Dist. 235, New Taipei City, Taiwan
Tel: +886 2 7731 5388
Fax: +886 2 7731 5389
Email: info@newland-id.com.tw
Web: www.newland-id.com.tw

Newland Japan

Tel: +886 2 7731 5388 ext. 71
Email: info@nlscan.com
Web: www.newlandaidc.com/jp/

Newland Korea

Newland EMEA

Newland Europe BV

Add: Rolweg 25, 4104 AV Culemborg, The Netherlands
Tel: +31 (0) 345 87 00 33
Fax: +31 (0) 345 87 00 39
Email: sales@newland-id.com
Tech Support: tech-support@newland-id.com
Web: www.newland-id.com

Newland NALA

Newland North America Inc.

Add: 46559 Fremont Blvd., Fremont, CA 94538, USA
Tel: +1 510 490 3888
Fax: +1 510 490 3887
Email: info@nlscan.com
Web: www.newlandamerica.com

Add: Biz. Center Best-one, Jang-eun Medical Plaza 6F, Bojeong-dong 1261-4, Kihung-gu, Yongin-City, Kyunggi-do, South Korea
Tel: +82 10 8990 4838
Fax: +82 70 4369 0009
Email: info@nlscan.com
Web: www.newlandaidc.com/kor/

Newland India

Add: 814, Tower B, NOIDA ONE business park B-8, Sector 62, Noida, Uttar Pradesh-201301
Tel: +91 120 7964266
Email: info@nlscan.com
Web: www.newlandaidc.com

Newland Latin America

Tel: +1 (239) 598 0068
Fax: +1 (239) 280 1238
Email: info@newlandla.com
Web: www.newlandamerica.com



Newland Auto-ID Tech. Co., Ltd.